

Glydea™ Range E X P A N D I N G H O R I Z O N S



Glydea Databook

June 2010

Subject to change without prior notice

1 Databook Glydea R0PR9 / 2010-06-23

HOME
MOTION BY

somfy®

I. MOTORS, MODULES AND TRACK	p 3
II. APPLICATION PERIMETERS	p 22
III. CONTROL OPTIONS AND WIRING	p 27
IV. INSTALLATION AND SETTING INSTRUCTIONS	p 38
• UP SIDE DOWN MOUNT	p 60
V. TANDEM	p 61
VI. PART LIST	p 63

I. MOTORS, MODULES, AND TRACK



Glydea Technical Characteristics

Glydea Technical Characteristics



		GLYDEA™ 35			GLYDEA™ 60e			
		Glydea 35 DCT EU 1,5M	Glydea 35 DCT US 10' + Plug	Glydea 35 WT EU 1,5M	Glydea 60e DCT EU 1,5M	Glydea 60e DCT US 10' + Plug	Glydea 60e WT EU 1,5M	
Reference		1001261	1001536	1001525	1001265	1001538	1001537	
Mechanical characteristics	Nominal torque	Nm	0,6			1,0		
	Maximum stall torque	Nm	0,7			1,1		
	Nominal speed typical	rpm	90			140 / 122,5 / 105 / 87,5		
	Working temperature	°C	0°C to +60°C			0°C to +60°C		
		°F	+32°F to +140°F			+32°F to +140°F		
	Humidity rate		85% at 35°C / 95°F			85% at 35°C / 95°F		
	Manual operation		Yes			Yes		
	Type of limit		Limits on end stops			Adjustable limits	Limits on end stops	
	Duty cycle		Intermittent - 10 min on / 20 min off			Intermittent - 10 min on / 20 min off		
	Protection index	IP	30			30		
	Soft stop		No			Yes		
	Soft start		Yes			Yes		
	Adjustable speed		No			Yes		
Noise level (pressure level) ⁽¹⁾	dB(A)	43			42/38/36/34 ⁽²⁾			
Net approx. weight of the mot	g	1180	1300	1220	1200	1320	1240	
Electrical characteristics	Voltage range	V AC	90 to 255			90 to 255		
	Frequency range	Hz	47 to 63			47 to 63		
	Maximum current	A	0.6 at 120V / 0,3 at 240V			0.8 at 120V / 0.4 at 240V		
	Stand by Power consumption	W	0,8			1.2		
	Power cable type		H05 VVF	SVT with US grounded plug	H05 VVF	H05 VVF	SVT with US grounded plug	H05 VVF
	Power cable number of wire		3		4	3		4
	Power cable wire section (∅)	mm ²	1	0,824	1	1	0,824	1
	Control connector		RJ12		N/A	RJ12		N/A
	Control method		Infrared / 2NO or 3NO dry contact		AC switching	Infrared / 2NO or 3NO dry contact	AC switching	
	Voltage in DCT control line (supplied by the motor)	V	3,3V DC		90V AC to 255V AC	3,3V DC		90V AC to 255V AC
	Maximum voltage drop in control line	V	1.2		N/A	1.2		N/A
	Touch motion		No			Yes		No
	Insulation class		Class I			Class I		
Maximum running time in one direction	min	2min 30s			2min 30s			
Standards & patents	Certification and marking	CCC, TÜV GS, CE, C-TICK, SASO	cTÜVus	CCC, TÜV GS, CE, C-TICK, SASO	CCC, TÜV GS, CE, C-TICK, SASO	cTÜVus	CCC, TÜV GS, CE, C-TICK, SASO	
	Patents	Patents pending						

(1) Sound pressure level , indicative and according to SOMFY measurement standard


(2) value given at the different Speed levels

Glydea Technical characteristics

Motor dimensions and wiring

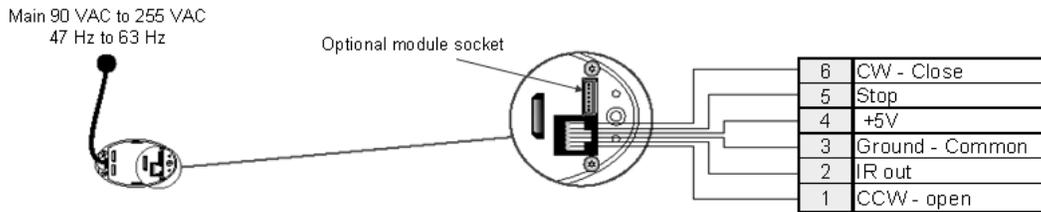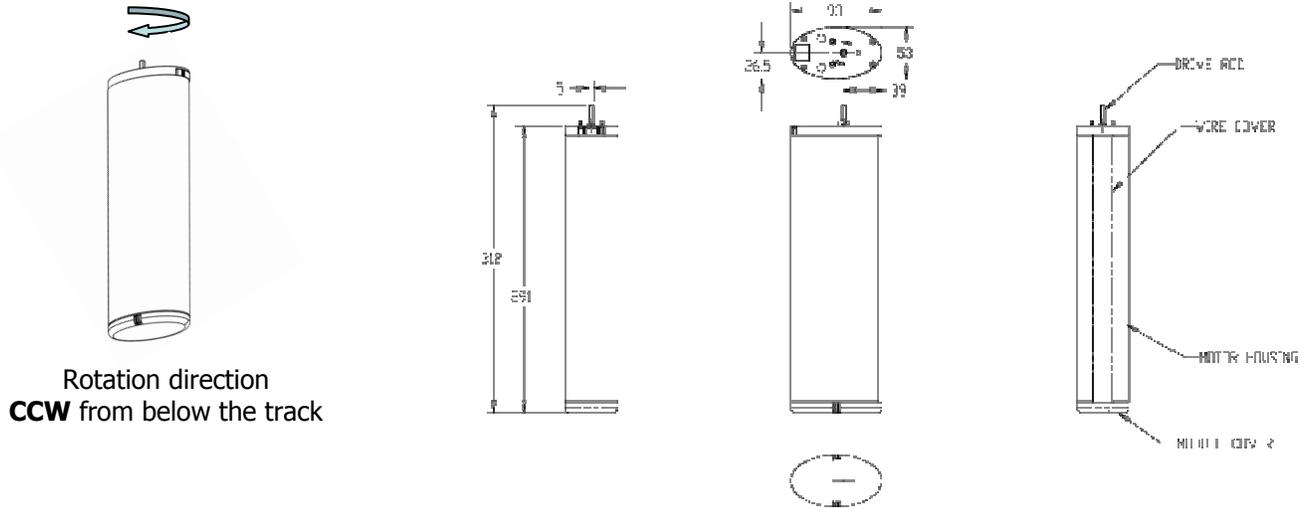


Glydea™ DCT

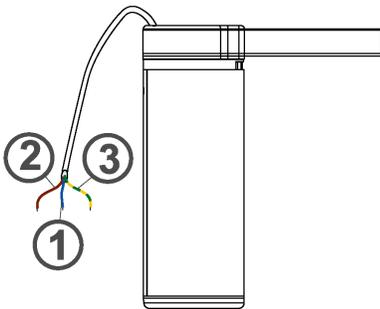

GLYDEA™ DCT

WIRE	90 – 255 VAC
1. Neutral	Blue
2. Live	Brown
3. Earth	Yellow / Green

Glydea™ WT

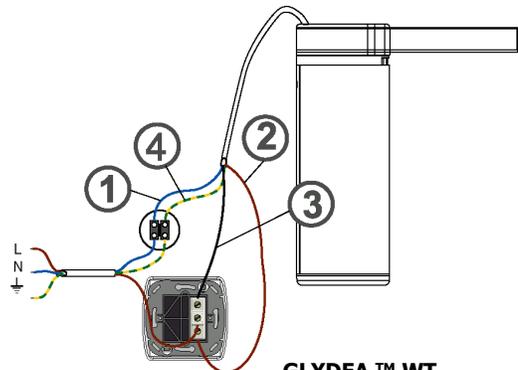

GLYDEA™ WT

WIRE	90 – 255 VAC
1. Neutral	Blue
2. Live	Brown
3. Live	Black
4. Earth	Yellow / Green

Glydea Technical Characteristics

Glydea Motorized Track Characteristics

		GLYDEA™ 35			GLYDEA™ 60e			
		Glydea 35 DCT EU 1,5M	Glydea 35 DCT US 10' + Plug	Glydea 35 WT EU 1,5M	Glydea 60e DCT EU 1,5M	Glydea 60e DCT US 10' + Plug	Glydea 60e WT EU 1,5M	
		Reference	1001261	1001536	1001525	1001265	1001538	1001537
Track mechanical characteristics	Average linear speed (straight)	cm/s	20,0			12,5 / 15,0 / 17,5 / 20,0		
	Weight capacity straight track	kg	35 kg on a 6m straight track			60 kg on a 10m straight track		
	Weight capacity one bent track	kg	15 kg on a 6m one bent track			30 kg on a 10m two bent track		
	Maximum weight per runner	kg	1,5			1,5		
	Maximum conflict strength	N	<150			<150		
	Maximum track length	m	10			15		
	Maximum rail junctions	Qty	2			2		
	Minimum bending radius	mm	300			300		
	Minimum curving radius	mm	3000			3000		
	Rail color	RAL	White			White		
	Rail material		6063-T52 AL or 6060-T64 AL			6063-T52 AL or 6060-T64 AL		
	Motor position		Right and/or left - up or down			Right and/or left - up or down		
	Type of openings		Central, lateral, multiple, asymmetric			Central, lateral, multiple, asymmetric		
	Type of curtain accommodated		Classic, pinch pleat, ripple curtain			Classic, pinch pleat, ripple curtain		
	Type of bracket		Swivel ceiling, one touch ceiling			Swivel ceiling, one touch ceiling		
Patents		Patents pending			Patents pending			
Noise level (complete track) ⁽¹⁾	dB(A)	50			44⁽²⁾			


(1) Sound pressure Level I, Indicative and according to SOMFY measurement standard

(2) At 15 cm/s

Datis in red to be confirmed

Glydea Track Length Dimension Flexible Master Carrier

1. Lateral Opening GA 35 (One Way)

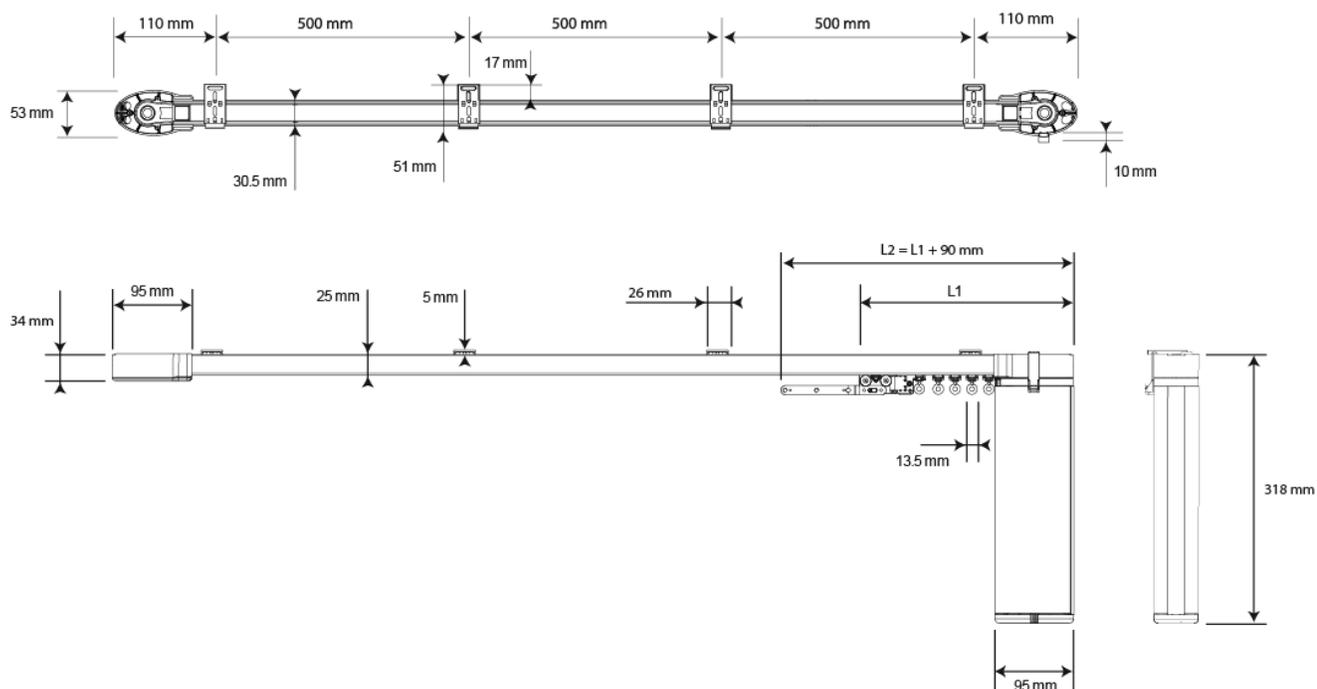

Stack Size


L2 = covered area when retracted

L1 = 176 + 13.5 x number of runners

L2 = L1 + 90 mm

Glydea Track Length Dimension Flexible Master Carrier

2. Central Opening with Overlap GA 35 (Two Way)

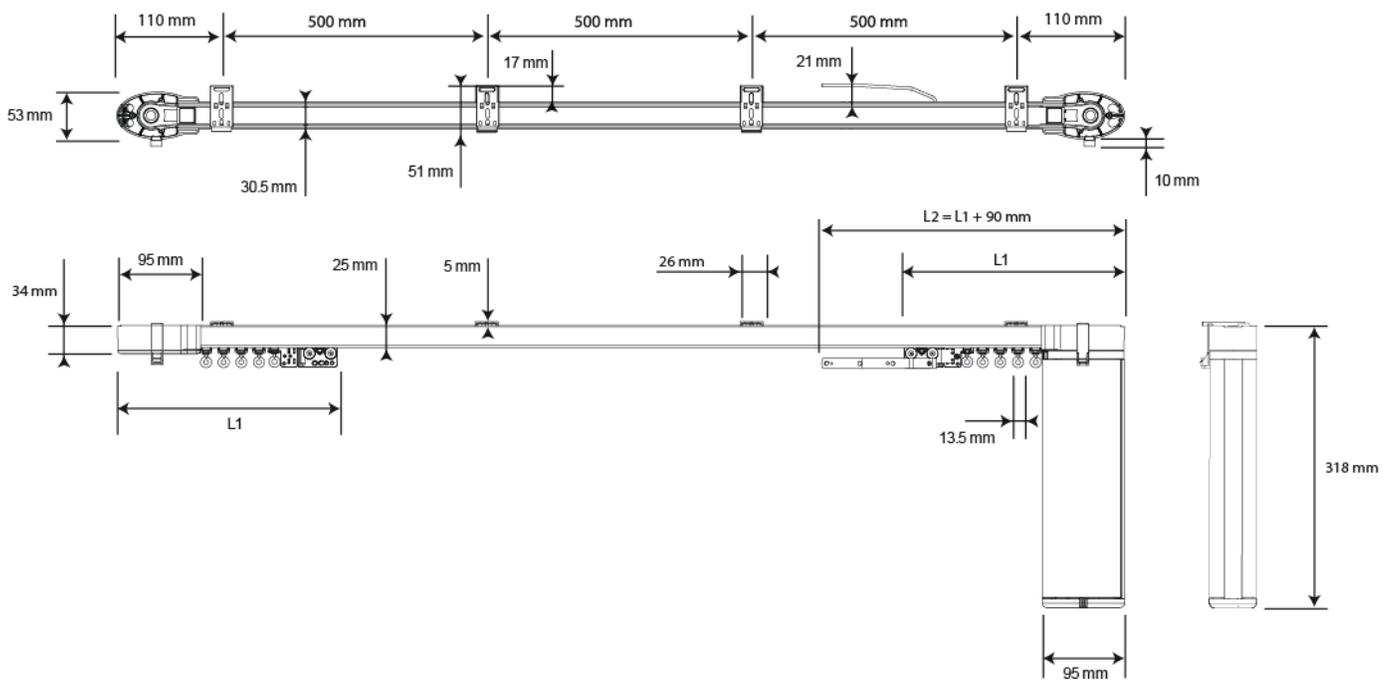

Stack Size


$L1 + L2 =$ covered area when retracted

$L1 = 176 + 13.5 \times$ number of runners

$L2 = L1 + 90$ mm

Glydea Track Length Dimension Heavy Duty Master Carrier

1. Lateral Opening Heavy Duty (One Way)

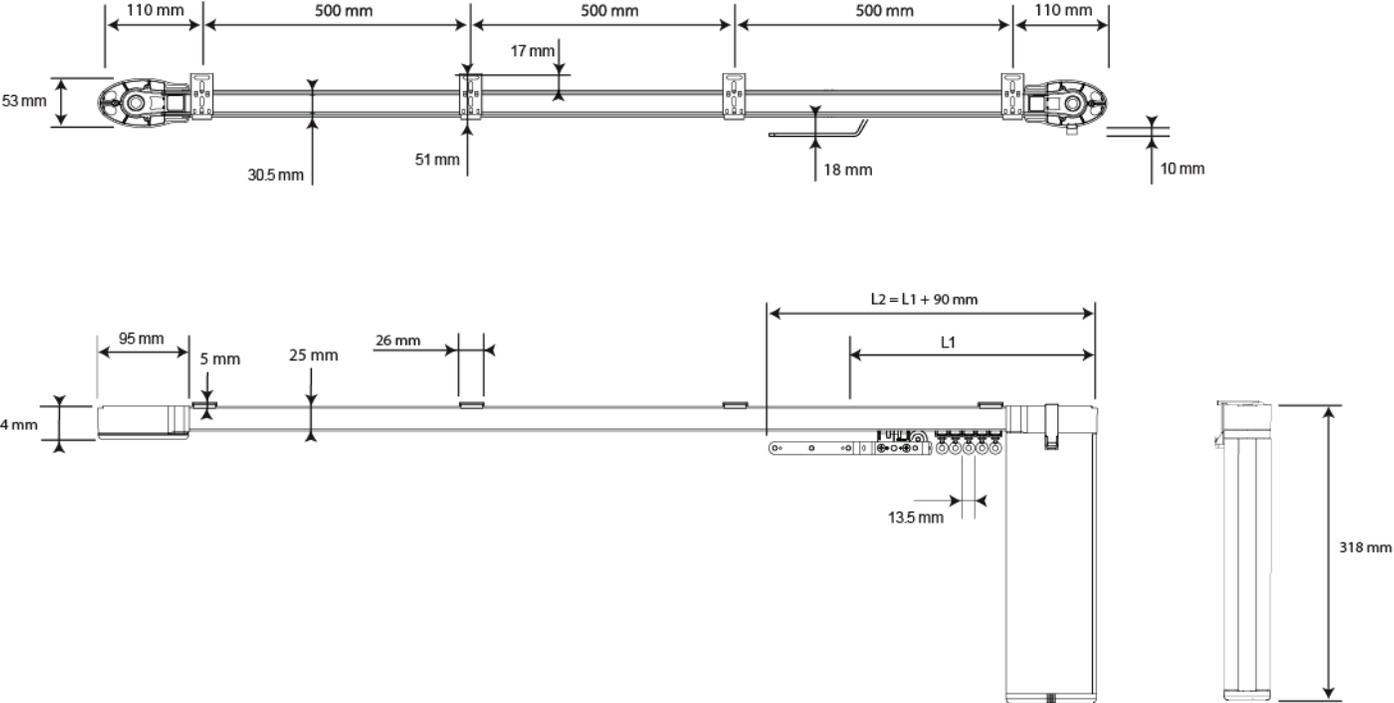


Stack Size

- L2 = covered area when retracted
- L1 = 170 + 13.5 x number of runners
- L2 = L1 + 90 mm

Glydea Track Length Dimension Heavy Duty Master Carrier

2. Central Opening with Overlap (Two Way)

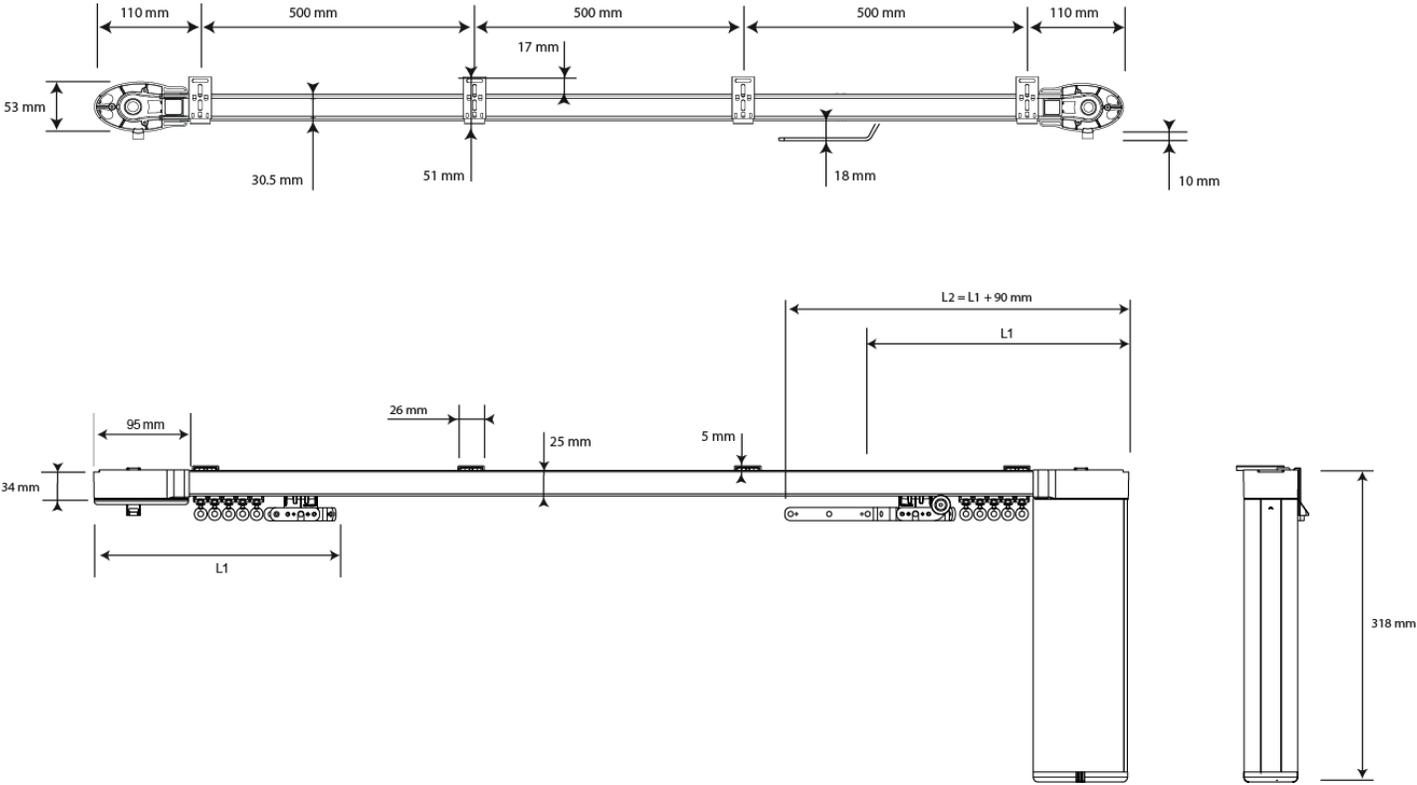

Stack Size


L1 + L2 = covered area when retracted

L1 = 170 + 13.5 x number of runners

L2 = L1 + 90 mm

Glydea Track Length Dimension Heavy Duty Master Carrier

4. Central Opening with Ripple Runners and Overlap Arm (Two Way)

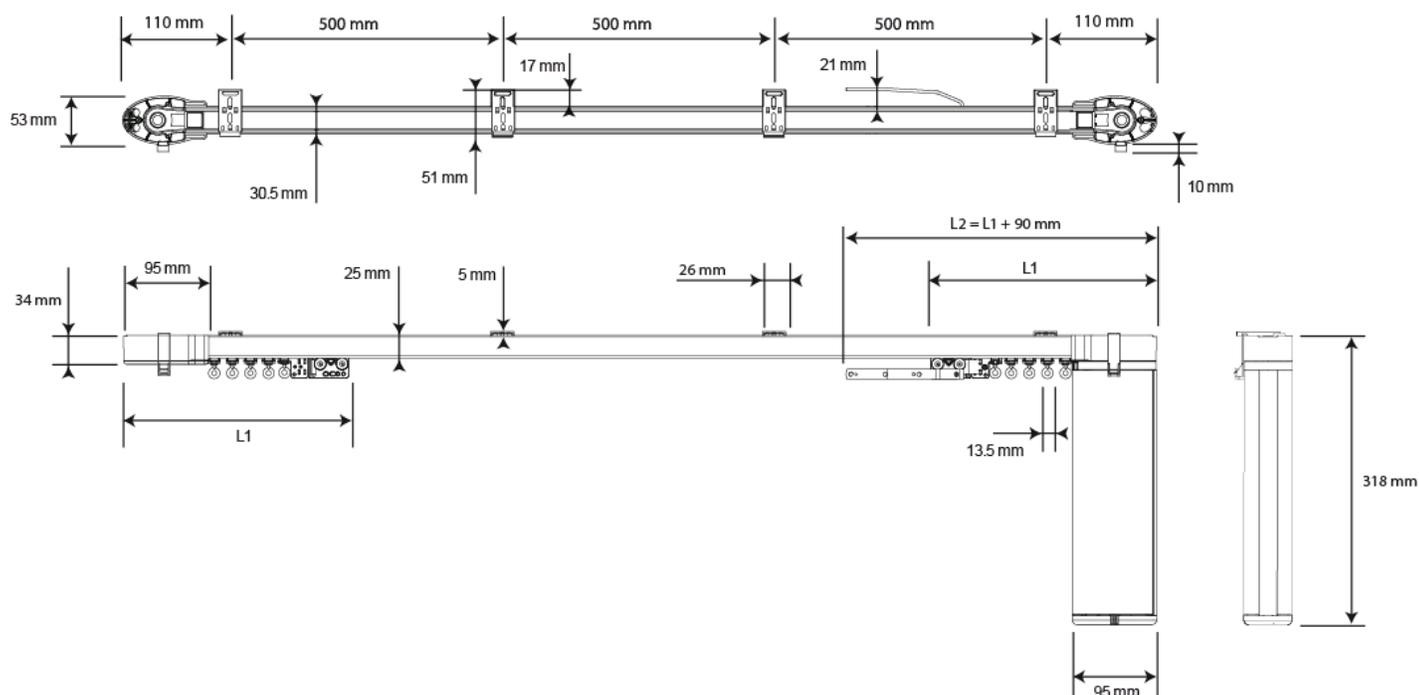

Stack Size


$L1 + L2 =$ covered area when retracted

$L1 = 170 + 13.5 \times$ number of runners

$L2 = L1 + 90$ mm

Glydea Track Length Dimension Heavy Duty Master Carrier

5. Central Opening with Ripple Runners and Butt Arms (Two Way)

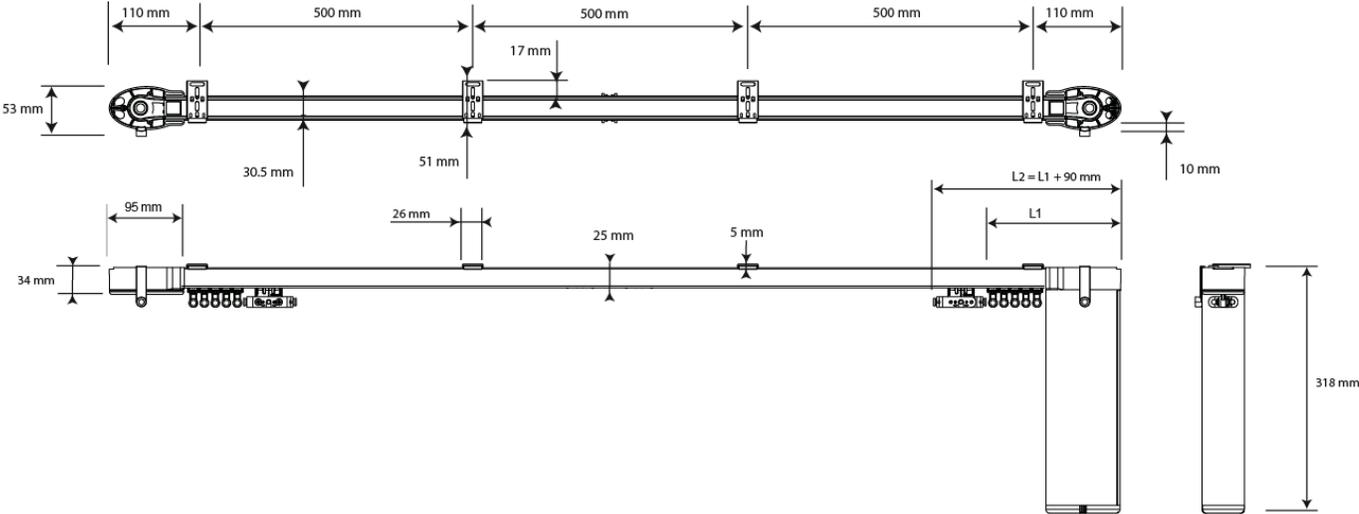


Stack Size

L1 + L1 = covered area when retracted


L1 = 170 + 13.5 x number of runners

Glydea Accessories Dimensions

1. One Touch Ceiling Bracket

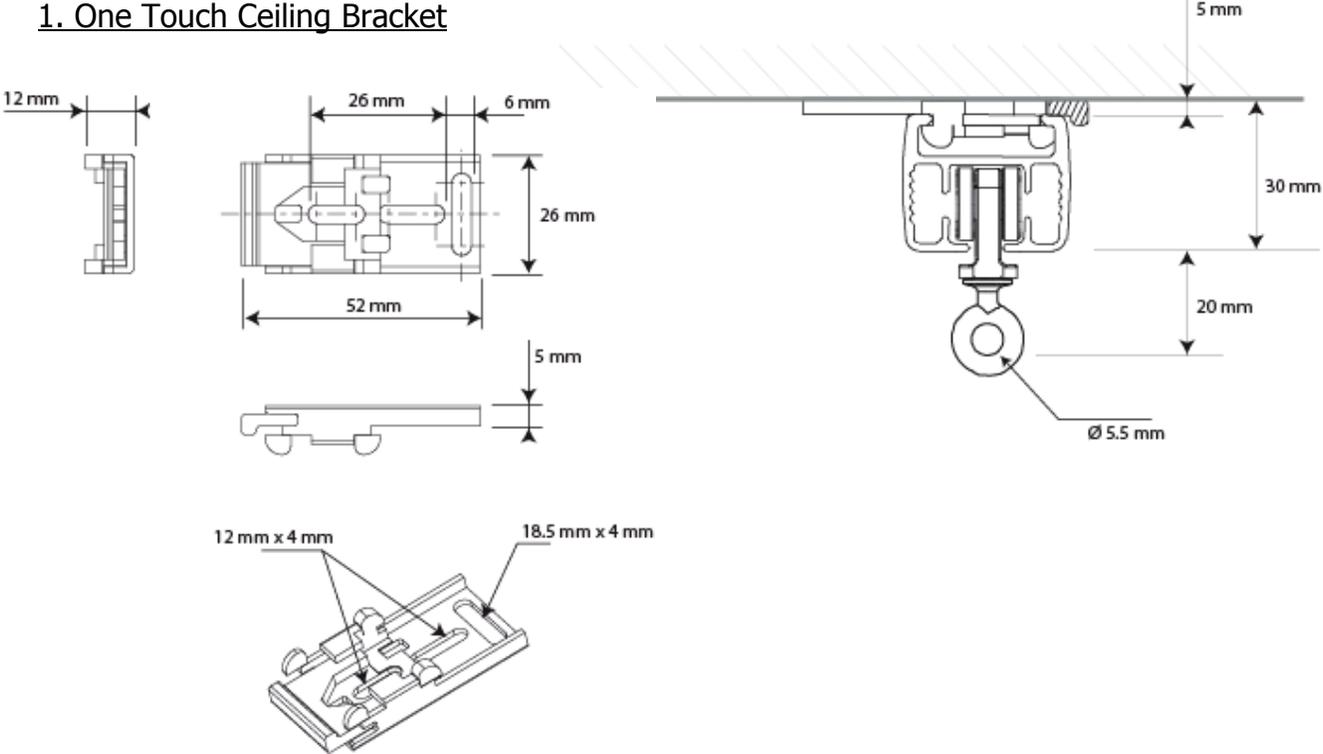

2. Swivel Ceiling Bracket


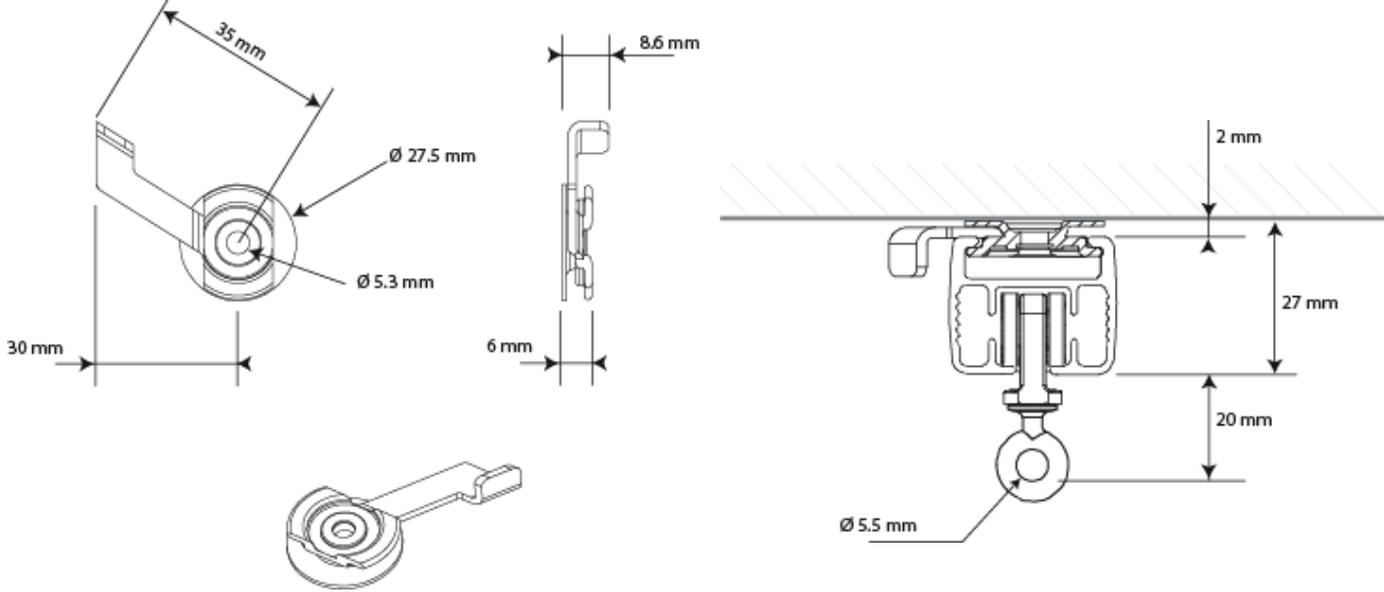


Subject to change without prior notice





Glydea Accessories Dimensions

3. Adjustable Wall Mount Bracket

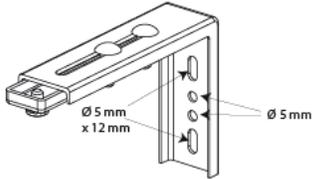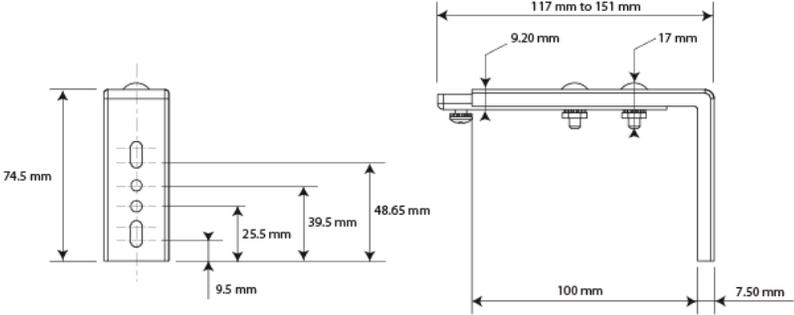

4. Double Adjustable Wall Mount Bracket

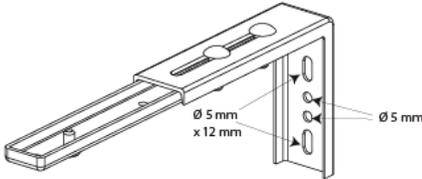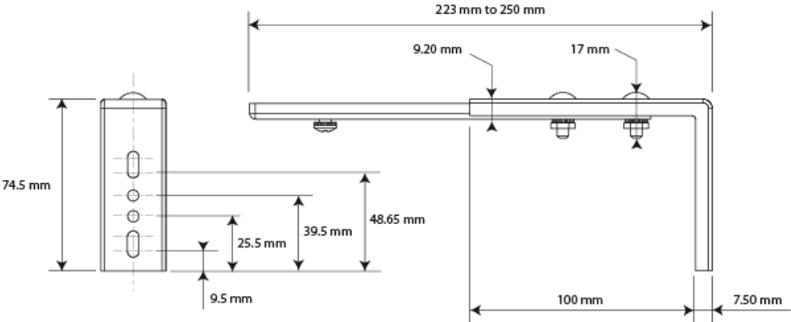


Technical Datasheet Glydea 433 Mhz RTS Receiver

Designation	RTS 433 RECEIVER GLYDEA
Reference	1 870 172
Range	RTS Receiver (EU - US - CHINA)

FUNCTIONS

**Pluggable RTS 433 Mhz receiver for Glydea DCT motors.
For internal use only.**

DIMENSIONS

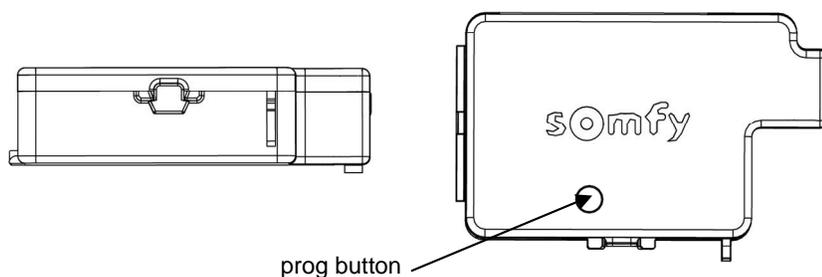

TECHNICAL SPECIFICATIONS

Box	Material Colour	ABS White
Protection factor against solid & splash proof		IP 20
Standards		EN 301 489-3 EN 300 220-3 EN 60 730-1
Temperature range		Nominal use : 0°C to +60°C (+32°F to +140°F) Storage : -30°C to +80°C (-22°F to +176°F) Humidity Rate : 85% at 35°C (+86°F)
Radio protocol		Somfy RTS protocol U80
Radio frequency	Mhz	433.42 MHz +/-0.1
Sensitivity	dBm	- 103 dBm with 20 dB SINAD
Modulation type		ASK type A1 (Amplitude Modulation)
Radio range	m	200 m without obstacle
Antenna		Integrated
Rolling code		16 million codes
Dielectric strength		Class III
Weight		Approx. 20 g
Number of RTS transmitter		12 maximum (Compatible controls at the date of April 22th 2009 : Situo RTS, Telis 1 RTS, Telis 4 RTS, Telis soliris , Impresario chronis RTS, Composio RTS, Telis modulis, Telis modulis soliris, Inis RTS, Chronis RTS, Easy Chronis RTS)
Motor compatibility		GLYDEA DCT Control Motors
Certification		CE, FCC


Technical Datasheet Glydea RTS Asia Receiver

Designation	RTS ASIA RECEIVER GLYDEA (426 Mhz Japan – 447 Mhz South Korea – 409 Mhz Hong Kong)
Reference	1 870 173
Range	RTS Receiver

FUNCTIONS

Pluggable RTS Asia receiver for Glydea DCT motors.
Factory preset on 426 Mhz (Japanese frequency).
447 Mhz South Korea and 409 Mhz Hong Kong radio range available via embedded frequency selection micro switch.
For internal use only.

DIMENSIONS

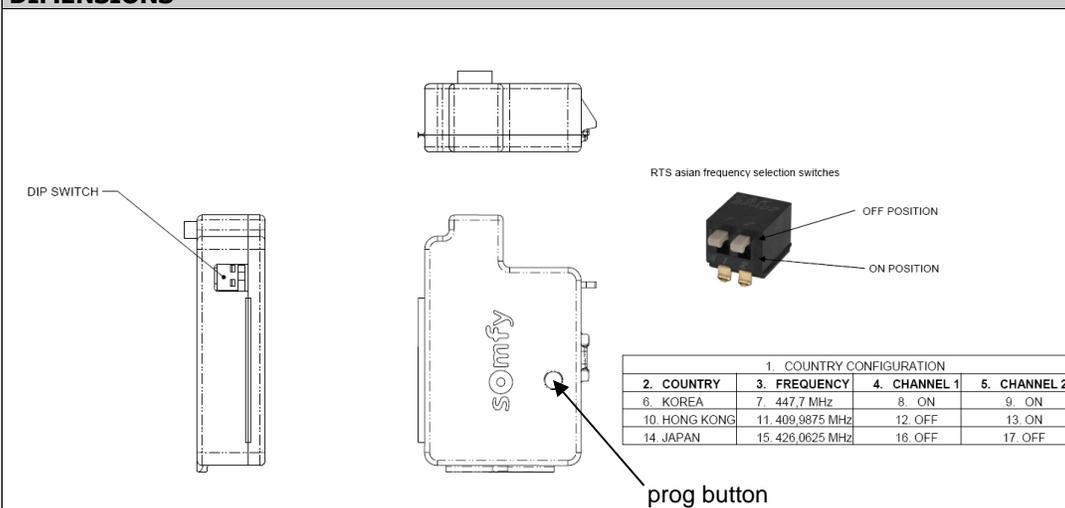

TECHNICAL SPECIFICATIONS

Box	Material	ABS
	Colour	White
Protection factor against solid & splash proof		IP 20
Standards		EN 301 489-3 EN 300 220-3 EN 60 730-1
Temperature Range		Nominal use : 0°C - +60°C (+32°F - +140°F) Storage : -30°C - +80°C (-22°F - +176°F) Humidity Rate : 85% at 35°C (+86°F)
Radio protocol		Somfy RTS protocol U 80
Radio Frequency	Mhz	426.0625 Mhz +/- 0.001 447.7 Mhz +/- 0.001 409.9875 Mhz +/- 0.001
Sensitivity	dBm	- 103 dBm with 20 dB SINAD
Modulation type		FSK (Frequency modulation)
Radio range	m	200 m without obstacle
Antenna		Integrated
Rolling code		16 million codes
Dielectric strength		Class III
Weight		Approx. 20 g
Number of RTS transmitter		12 maximum (Compatible controls at the date of April 22th 2009: Situo RTS, Telis 1 RTS, Telis 4 RTS, Telis soliris RTS)
Motor compatibility		GLYDEA DCT Control Motors
Certification		N/A

433 Mhz RTS Receiver and Asia RTS Receiver Compatibility

	RTS RECEIVER GLYDEA				
	1 870 172		1 870 173		
	EU - CHINA	US	JAPAN	SOUTH-KOREA	HONG-KONG
TRANSMITTERS (max.12)	433 Mhz		426 Mhz	447 Mhz	409 Mhz
SITUO RTS	1 810 636	--	1 810 746	1 810 745	1 810 748
TELIS 1 RTS					
Lounge	1 810 649	1 810 650	--	--	--
Silver	1 810 637	--	1 810 736	1 810 735	1 810 738
Patio	1 810 642	1 810 643	--	--	--
Pure	1 810 630	1 810 632	1 810 722	1 810 723	1 81 725
TELIS 4 RTS					
Lounge	1 810 651	1 810 652	--	--	--
Silver	1 810 638	--	1 810 741	1 810 740	1 810 743
Patio	1 810 644	1 810 645	--	--	--
Pure	1 810 631	1 810 633	1 810 655	1 810 727	1 810 729
TELIS SOLIRIS RTS					
Patio	1 810 646	1 810 647	1 810 732	1 810 731	1 810 788
Pure	1 810 634	--	--	--	--
TELIS SOLIRIS RTS					
Patio	1 810 648	--	--	--	--
IMPRESARIO CHRONIS RTS					
Lounge	1 810 661	--	--	--	--
Silver	1 810 662	--	--	--	--
TELIS COMPOSIO RTS					
Lounge	1 810 660	--	--	--	--
Silver	1 810 659	--	--	--	--
TELIS 4 MODULIS					
Lounge	1 810 664	--	--	--	--
Silver	1 810 663	--	--	--	--
TELIS MODULIS SOLIRIS					
Lounge	1 810 665	--	--	--	--
Silver	1 810 666	--	--	--	--
Dry contact transmitter	1 810 334	--	--	--	--
Inis RTS	1 810 180	--	--	--	--
Chronis RTS	1 810 040	--	--	--	--
Easy Chronis RTS	1 805 126	--	--	--	--
WT1 A	--	--	1 810 697	--	--
RS485 RTS Transmitter	1 810 803	--	--	1 810 965	--
SMOOVE 1 RTS OPEN CLOSE					
Pure Shine	1 811 011	--	--	--	--
Black Shine	1 811 009	--	--	--	--



Technical Datasheet Glydea DCT Splitter

Designation	DCT SPLITTER GLYDEA
Reference	9 015 442
Range	

FUNCTIONS


**Pluggable DCT Splitter Module for Glydea DCT motors.
For Group or Master and Individual Control
For internal use only.**

SCREW CONNECTOR WIRING

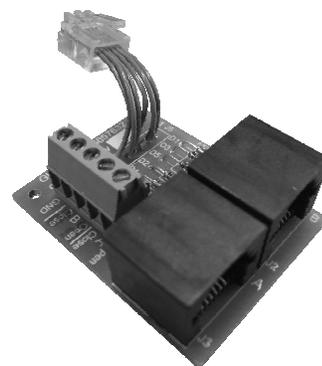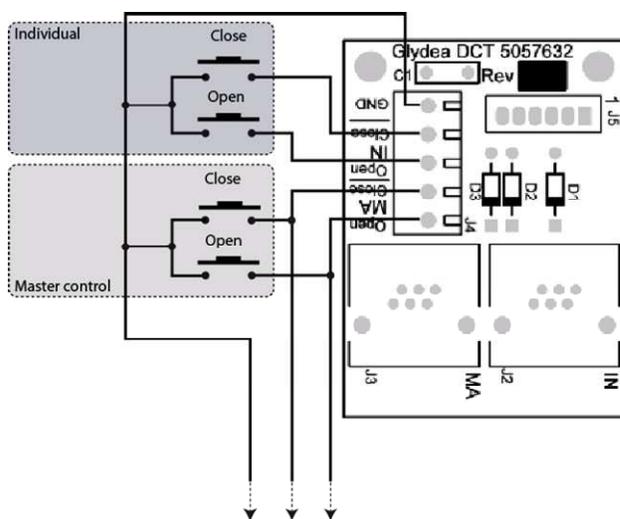


RJ 12 WIRING



Master control RJ12 (A)

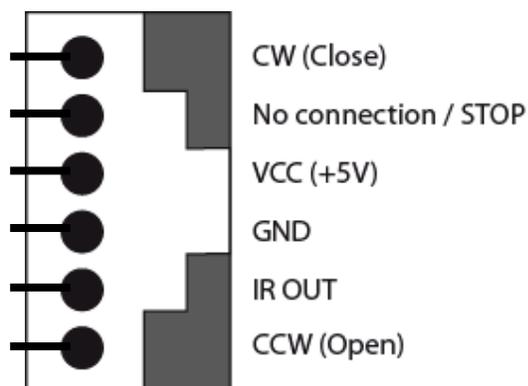

Individual control RJ12 (B)

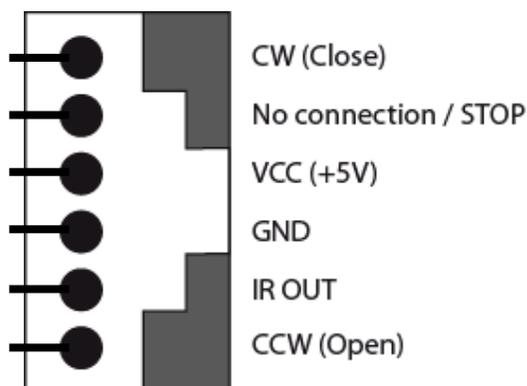

Motor compatibility		GLYDEA DCT Control Motors
Certification		CE

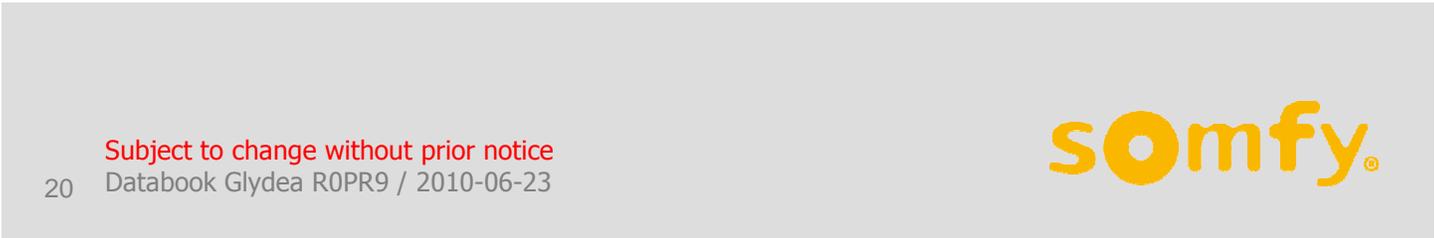

Technical Datasheet Glydea RS 485 Module



II. APPLICATION PERIMETER



Traversing Capacity

Motor load capacity according to track opening, shape, length

In the charts below we give the **maximum** weight of curtain in Kg, which has to be motorized by the different Glydea versions according to the different track configurations, and the length of the track.

When calculating the weight of the curtain the fullness ratio of the curtain has to be taken into account:

Weight of the curtain = fabric weight/m² x Curtain covered area x fullness ratio



The traversing capacity is given for an installation with no extra friction created by the fabric curtain touching the rail or the track pelmet.

- Track bending and curving radius

- Bending radius up to 300 mm



- Arc minimum radius = 3 000 mm

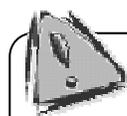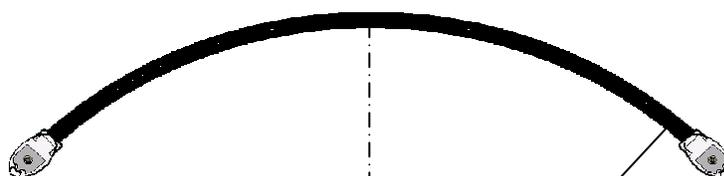

Due to the bending process 200 mm of the rail still straight on the both side of the curve or arc shape.









Traversing Capacity

- Track types


One way

Two way

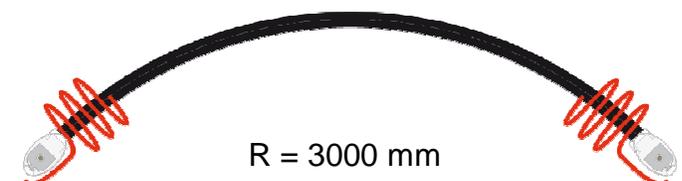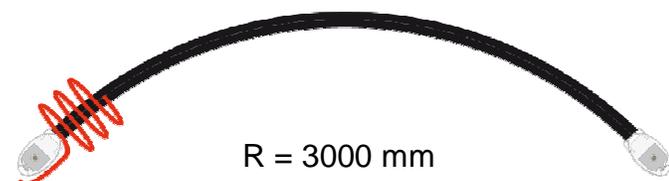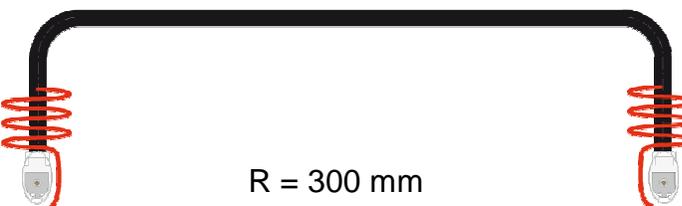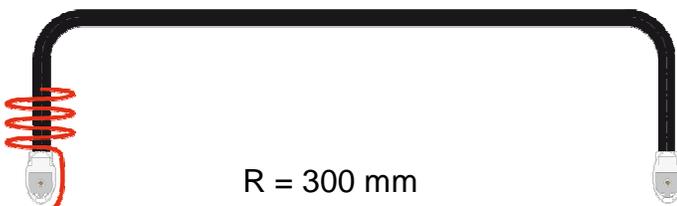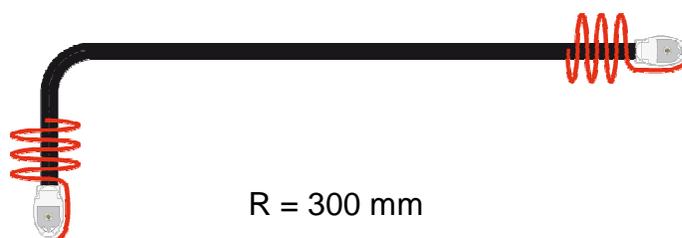
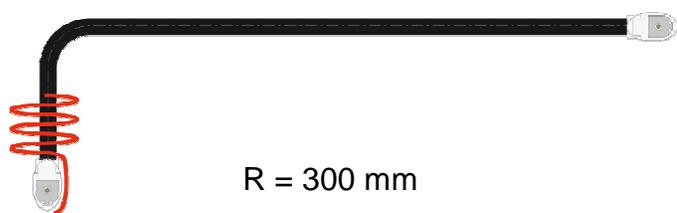


Traversing Capacity

- Straight track

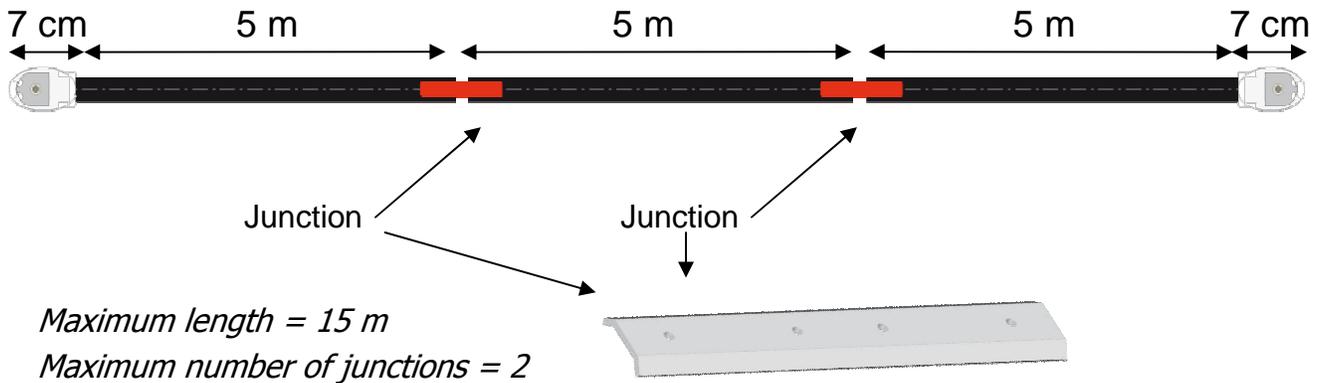





For bending and curving tracks length and radius limitation please refer to the specific data sheet

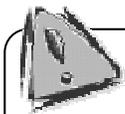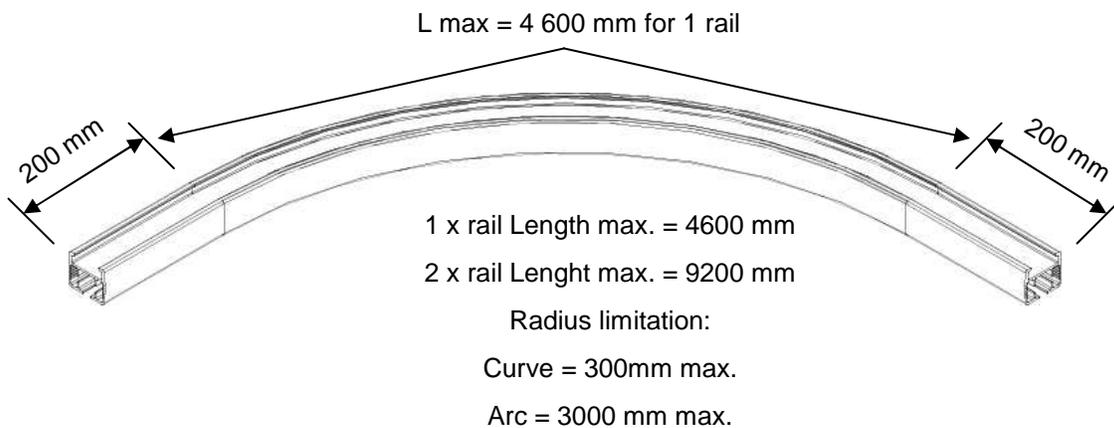

Due to the bending process 200 mm of the rail still straight on the both side of the curve or arc shape.

Selection Charts

Glydea 35, Glydea 60^e, Glydea 60^e Tandem

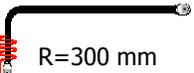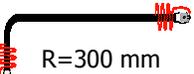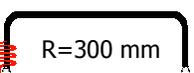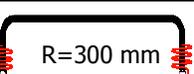Track type	GLYDEA 35			GLYDEA 60 ^e			GLYDEA 60 ^e Tandem		
	3m	6m	10m	6m	10m	15m	6m	10m	15m
A 	35*	35*	35	60	60				
B 	35*	35*	35	60	60			100	
C  R=300 mm	35*	15*		35					
D  R=300 mm	35*	15*		35					
E  R=300 mm	15			35					
F  R=300 mm	15			35	30			50	
G  R=3000 mm	35								
H  R=3000 mm	15								



Maximum load per runner: 1.5 Kg

Minimum distance between 2 runners: 100 mm

***: Capacity limit for MC1, MC1 is not applicable for the other configurations**


Datas in red to be confirmed

III. GLYDEA CONTROL OPTIONS AND WIRING



Glydea AC Control with AC switching


- AC contact switches types

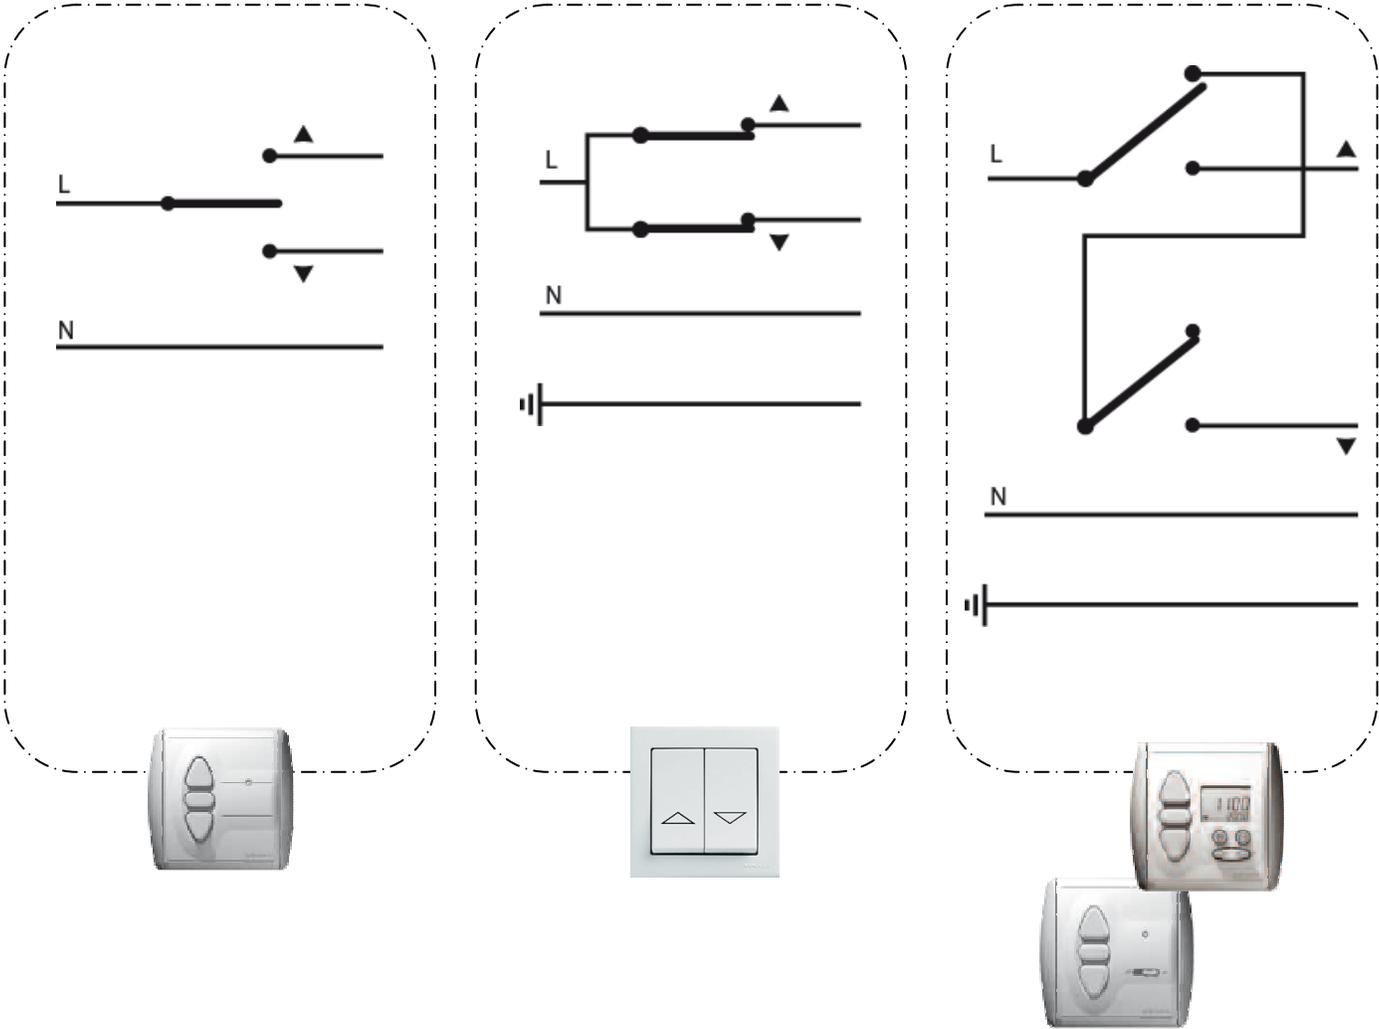


Do contact Somfy when using electronic switching control devices

Glydea Control Options and Wiring

1. Individual AC Control with AC switching contact

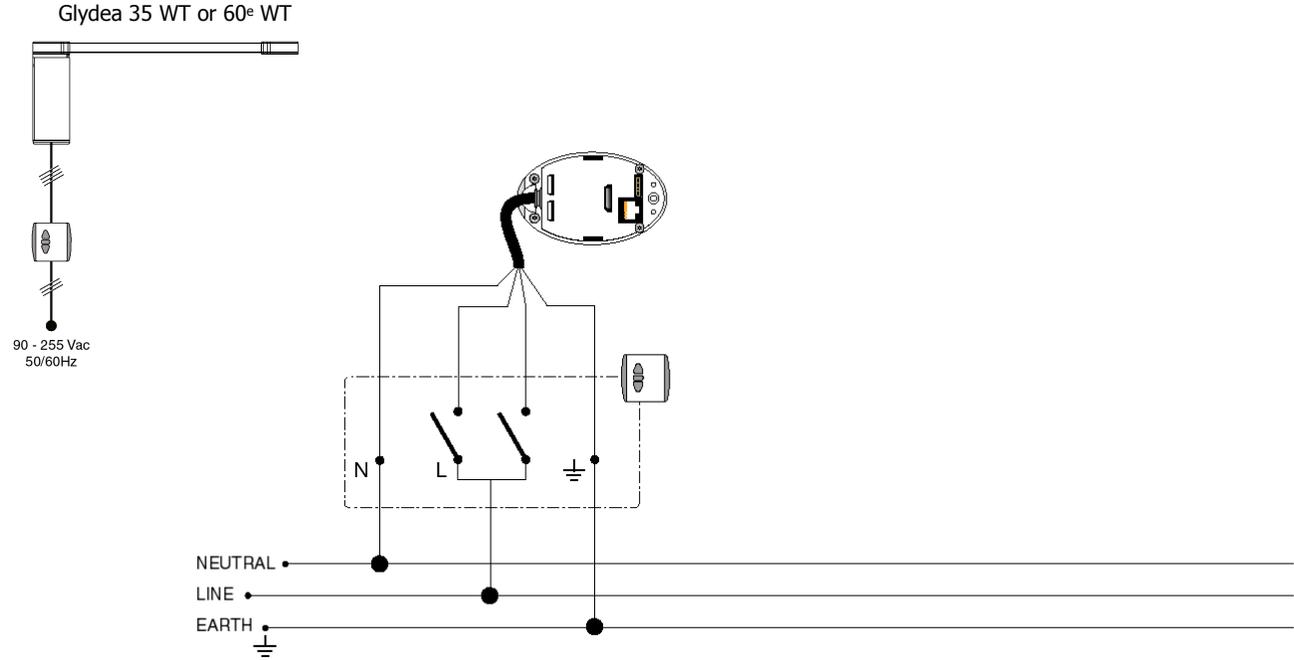

2. AC Group Control with AC switching contact

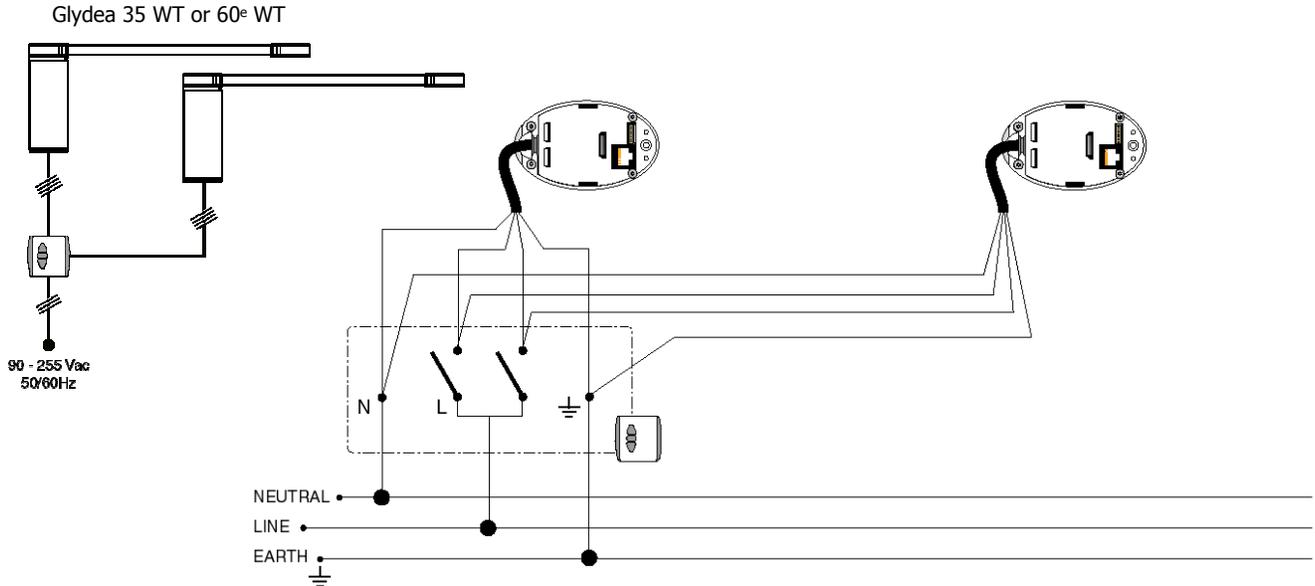


Glydea Wiring Schematics

Glydea DCT can be controlled by a combination of dry contacts, IR and RTS controls with the internal RTS receiver. The dry contact and IR controls are accessible through 1 RJ12 socket. The dry contacts control can be done through devices with 2 normally open contacts (open, close) or 3 normally open contacts (open, stop and close). For devices using 2 contacts the stop command is achieved by closing the open and close contacts. For three devices the stop can also be achieved with a specific stop button.


Individual, group and master DCT controls can be achieved using a DCT Splitter and a Diode boxes as show below.

- RJ 12 socket pin out

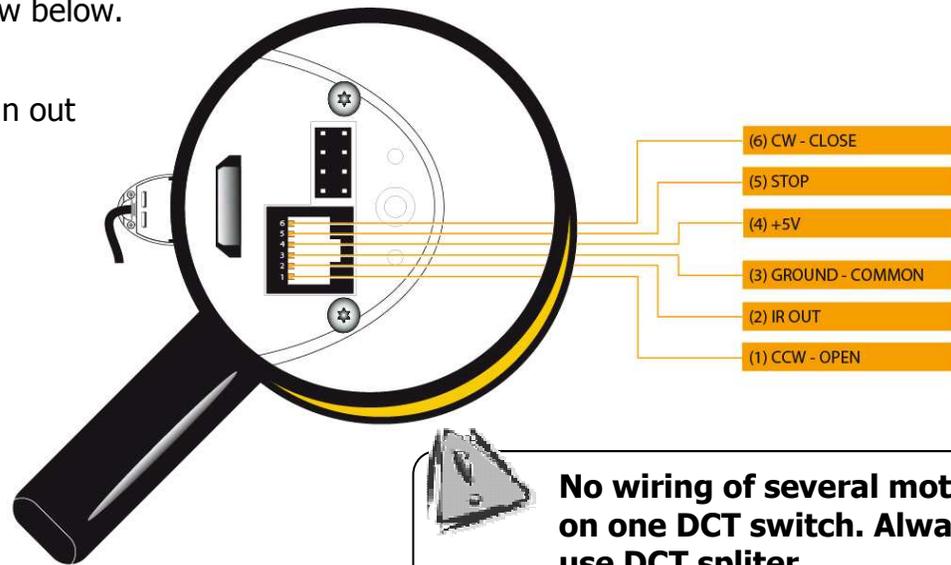


- Dry Contact switches and relays types


2 Normally Open contact

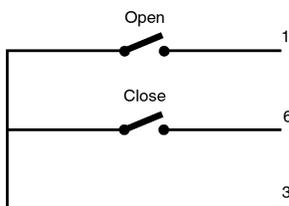


3 Normally Open contact

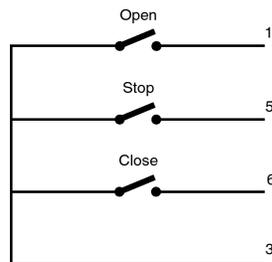

2 Normally Open contact + Stop in parallel

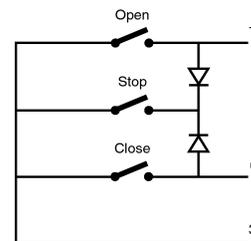


Stop or My = Open + Close

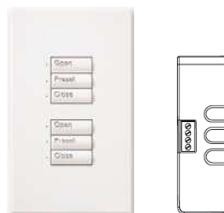

Glydea Control Options and Wiring


3. Individual DCT Control with a Somfy switch

Glydea 35 DCT or 60° DCT

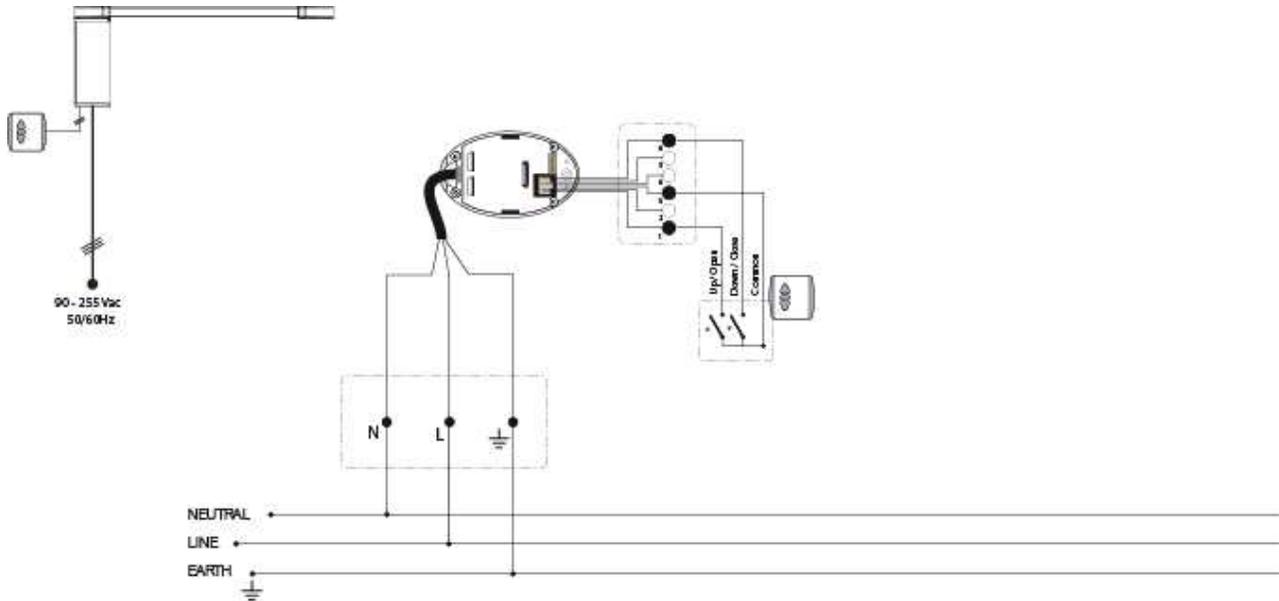

4. DCT Group Control with a Somfy switch


Glydea 35 DCT or 60° DCT + DCT splitter

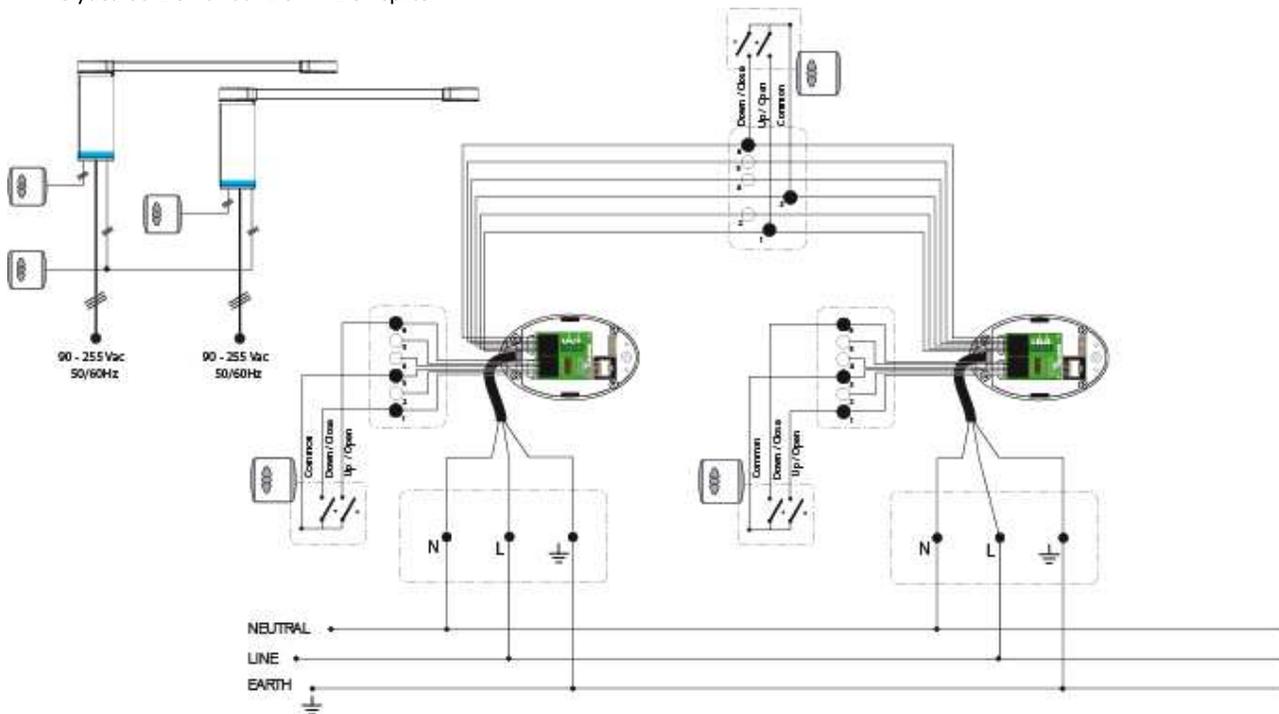

Glydea Control Options and Wiring

5. DCT Group Control via a Relay

Glydea 35 DCT or 60° DCT + DCT splitter

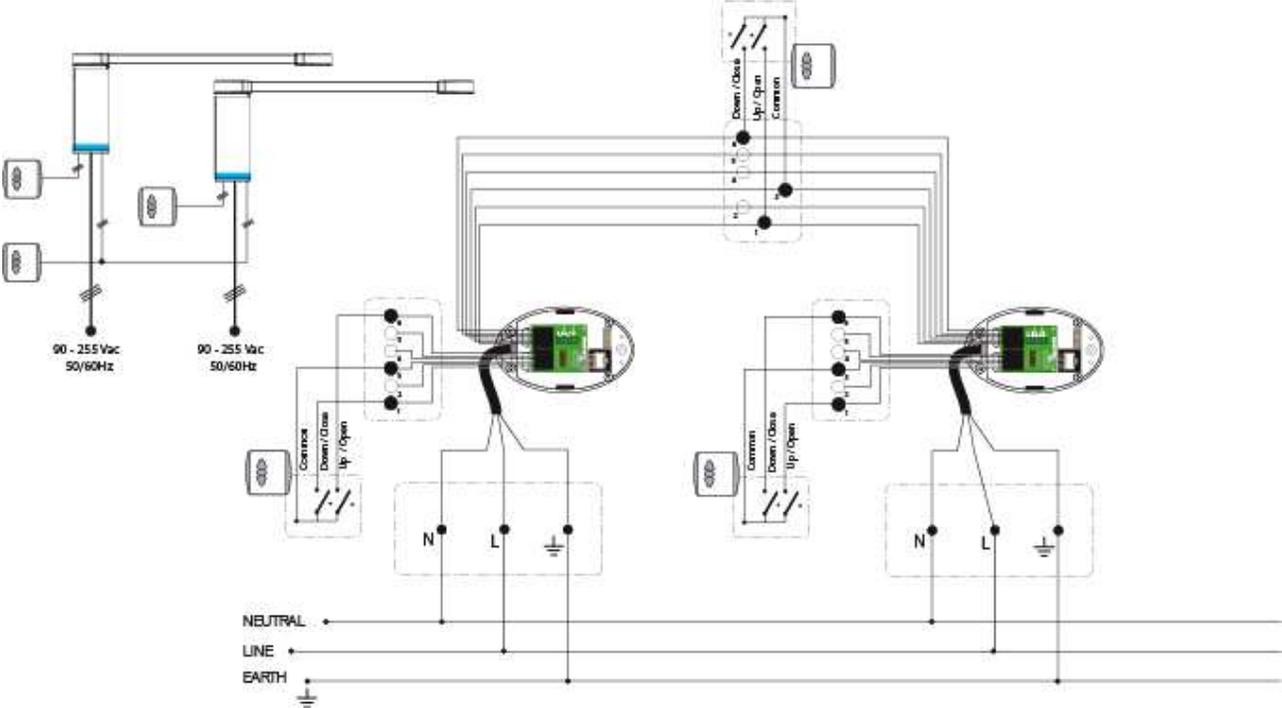


Number Of Glydea DCT and length of control line limitations


Wire cross-section	Maximum length of cable	Maximum number of motors
Modular cable AWG 24	100 m	10
0.75 mm ²	200 m	20

Glydea Control Options and Wiring

6. RTS Individual Control Glydea RTS receiver + Telis 1

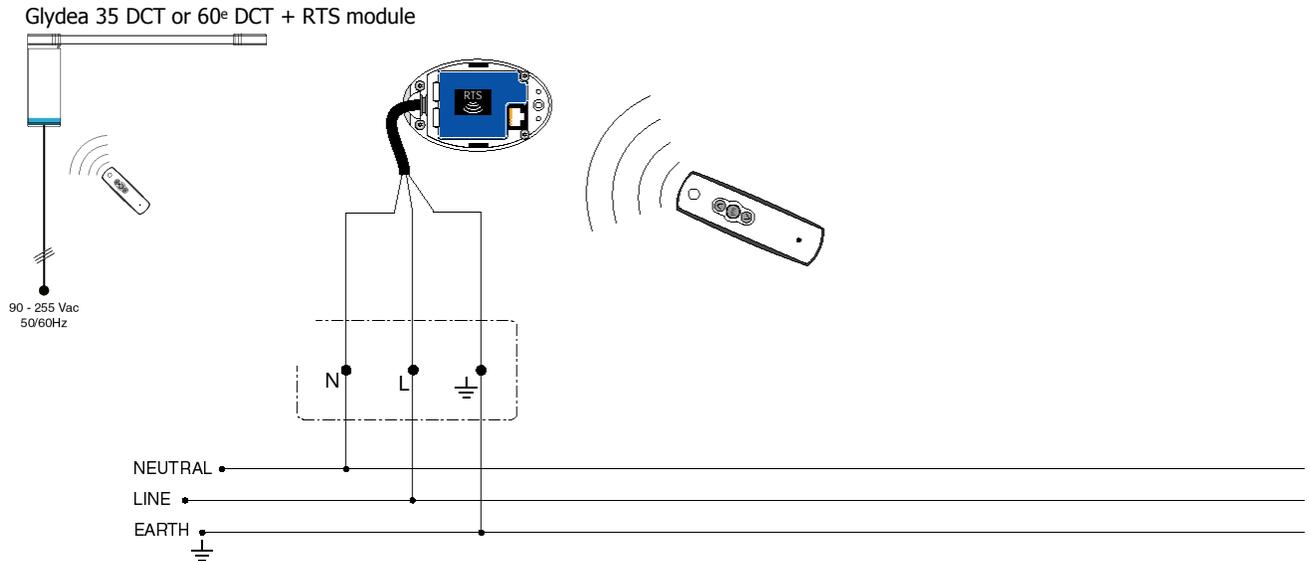


7. RTS Group Control Glydea RTS receiver + Telis 1 and Telis 4

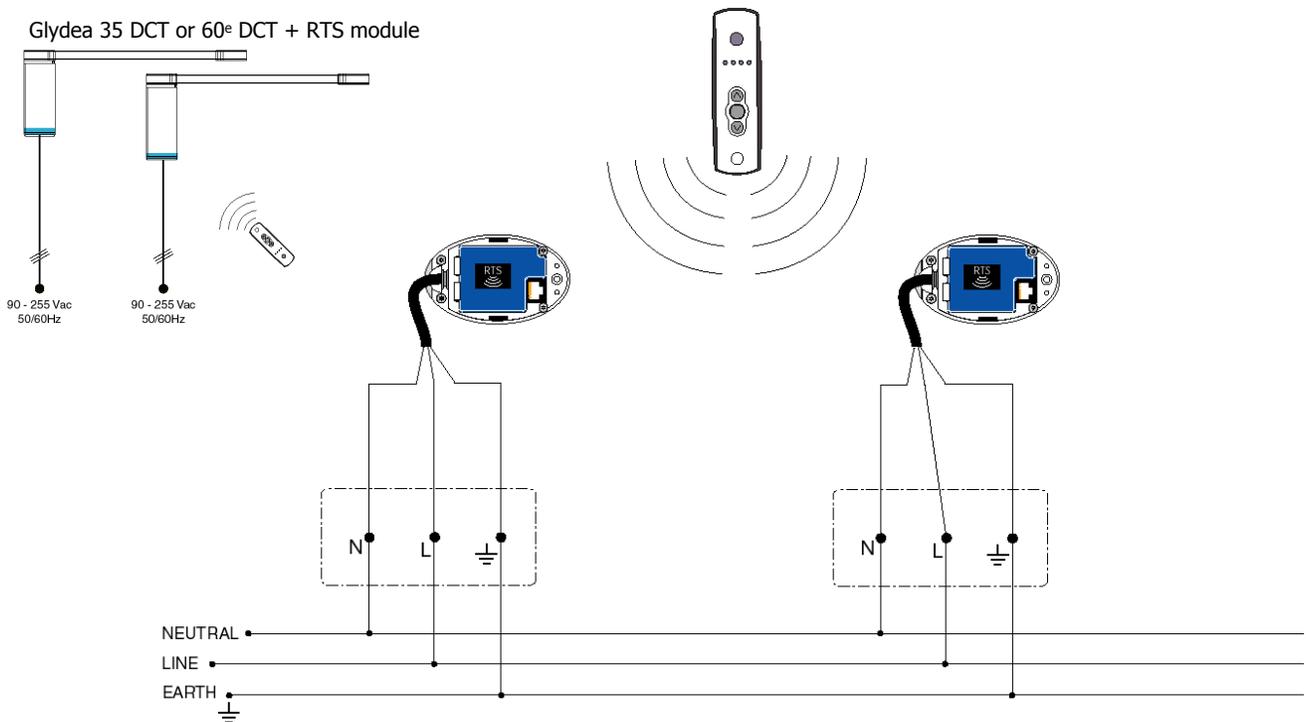

Glydea Control Options and Wiring


8. RTS Individual Control and Dry Contact Individual Control

Glydea 35 DCT or 60° DCT + RTS module

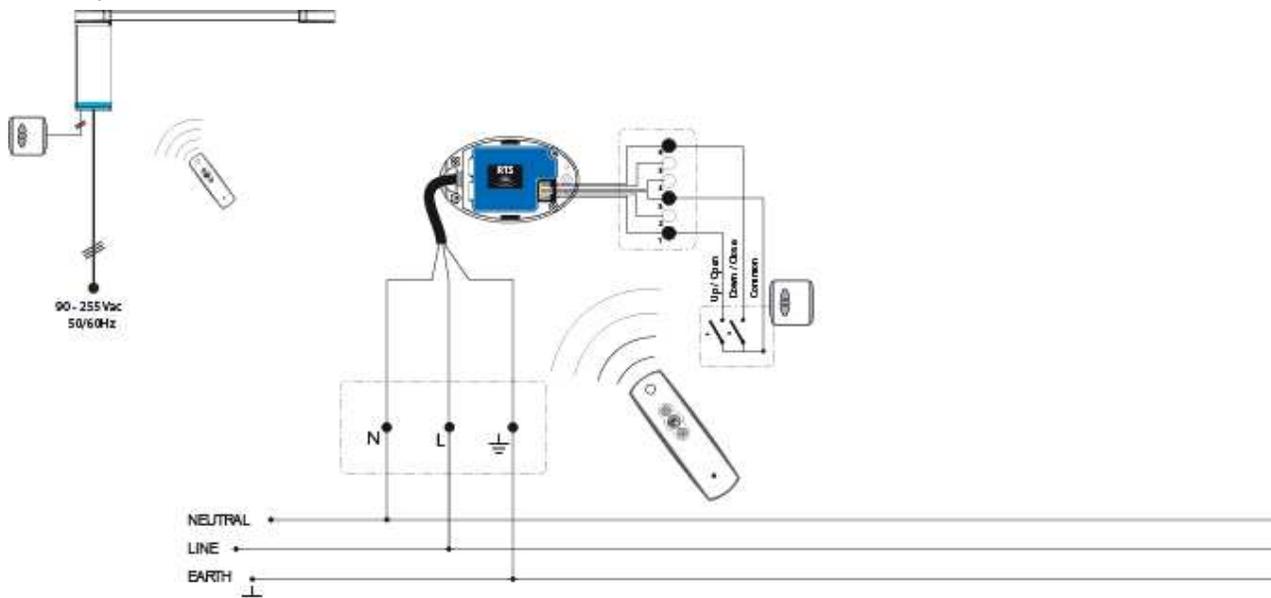

9. RTS Group Control and Dry Contact Individual Control


Glydea 35 DCT or 60° DCT + RTS module

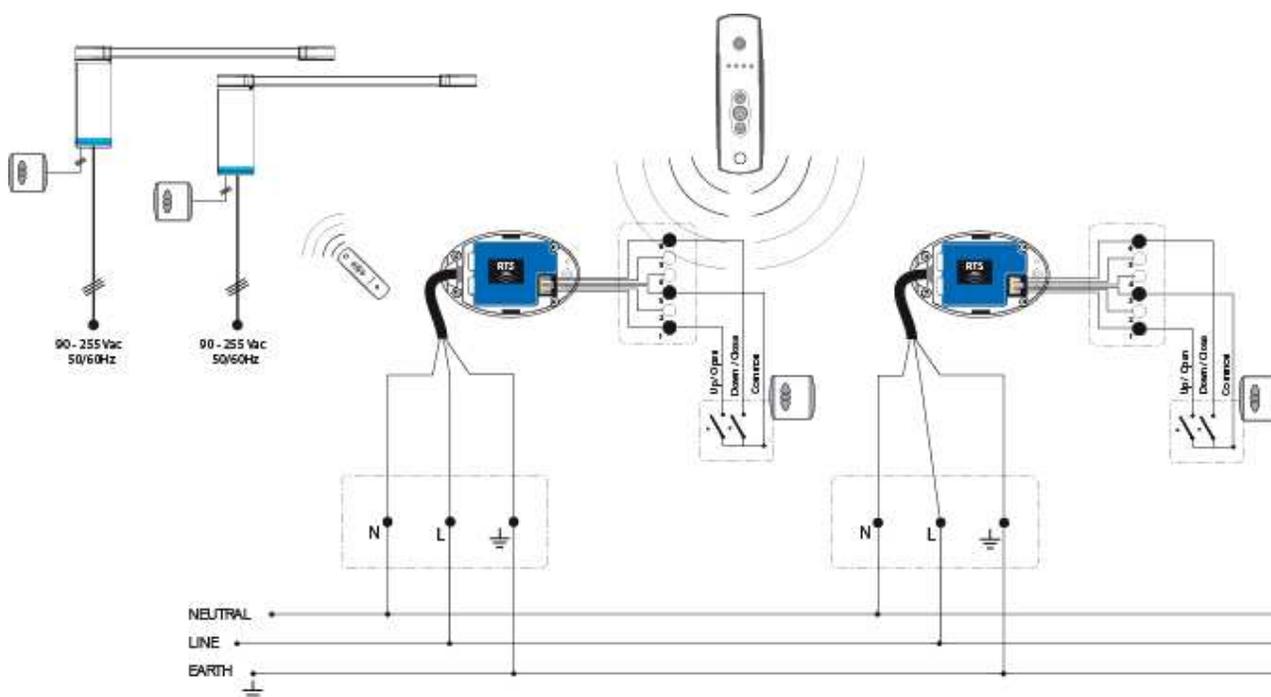

Glydea Control Options and Wiring


10. Infrared Individual Control with IR3 sensor and IR1

Glydea 35 DCT or 60° DCT + IR3 sensor

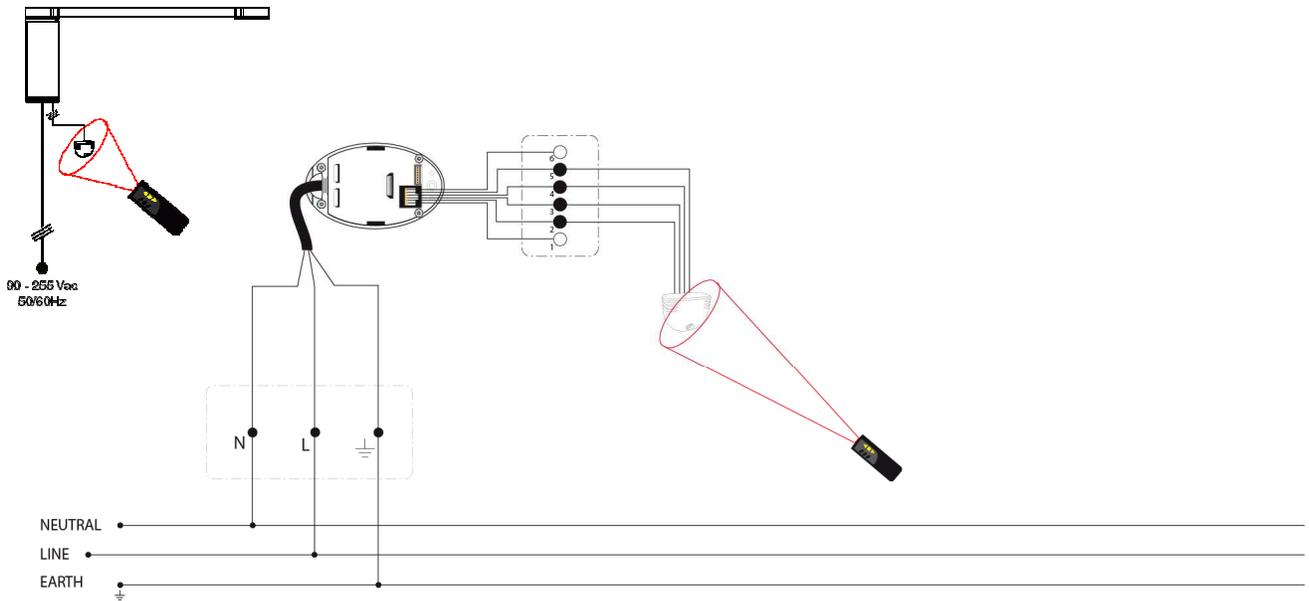

11. Infrared Group Control with IR3 sensor and IR8


Glydea 35 DCT or 60° DCT + IR3 sensor

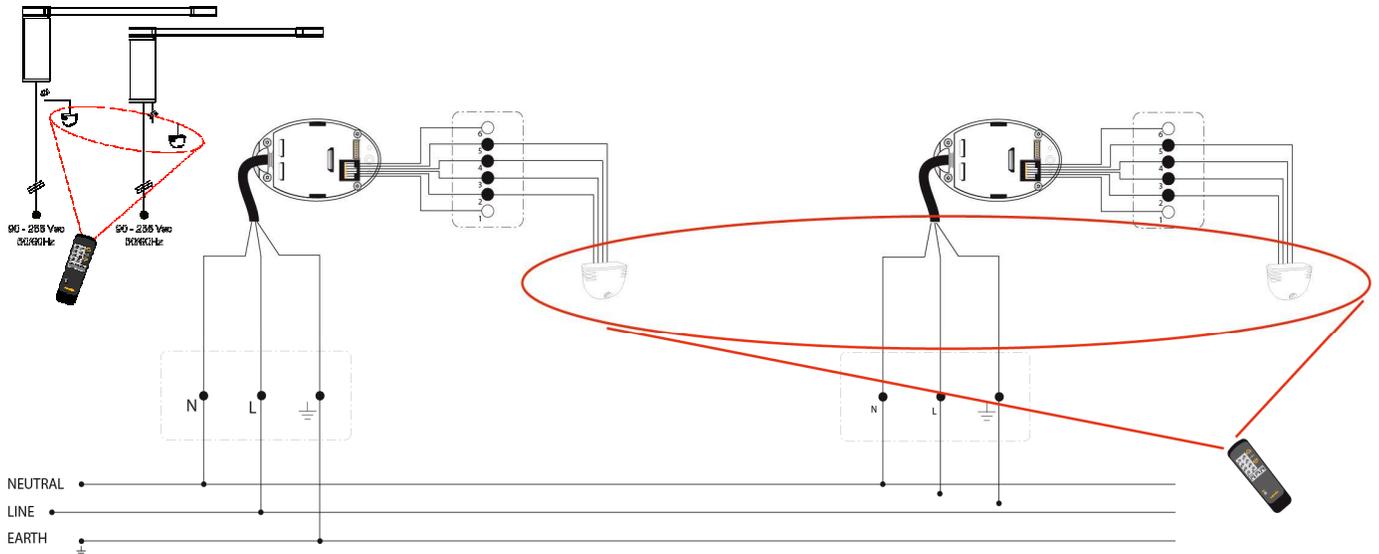

Glydea Control Options and Wiring


12. Infrared Group Control with IR3 sensor and IR8 and Dry Contact Individual Control

Glydea 35 DCT or 60° DCT + IR3 sensor

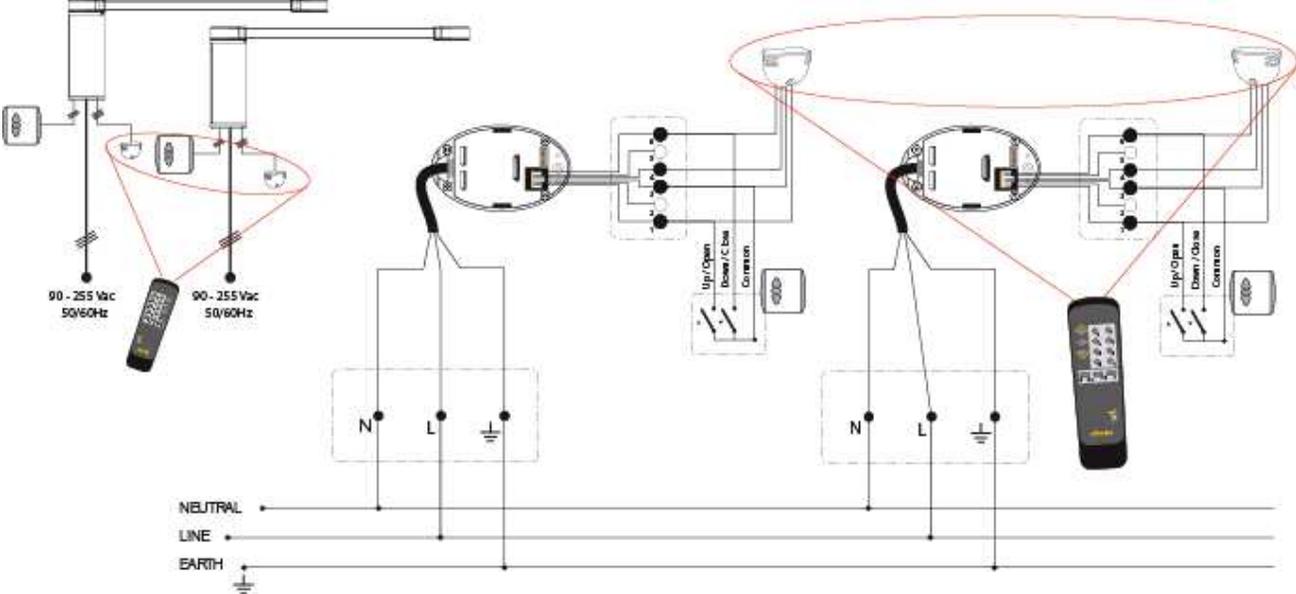


Glydea Control Options and Wiring

13. Animeo Group Control BUCO, MOCO and Dry Contact Individual Control

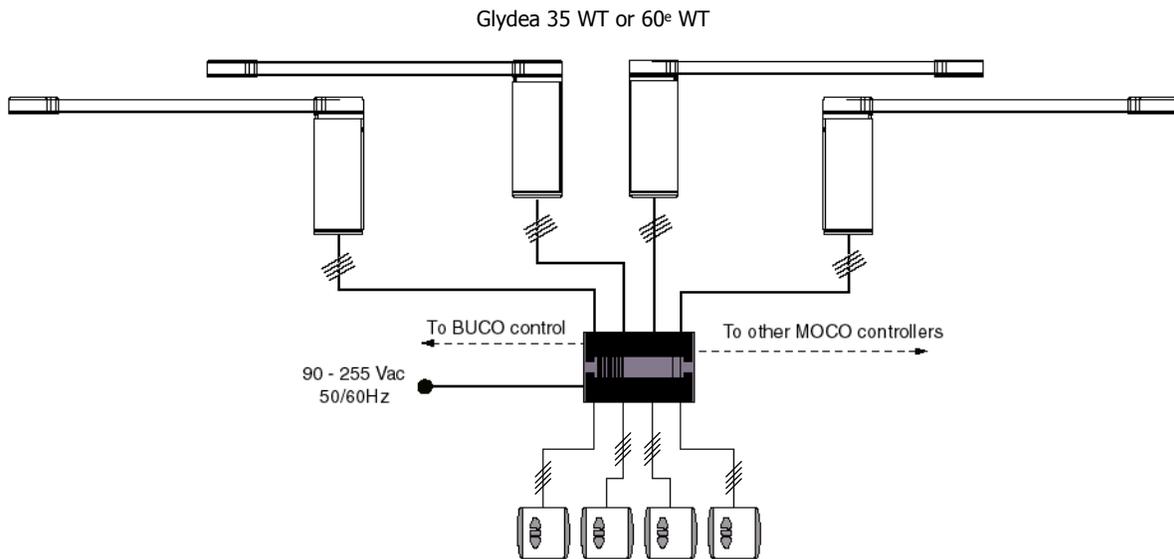

14. Animeo Group Control with BUCO, MOCO RTS sister card, and Individual and Group RTS Control and Dry Contact Individual Control

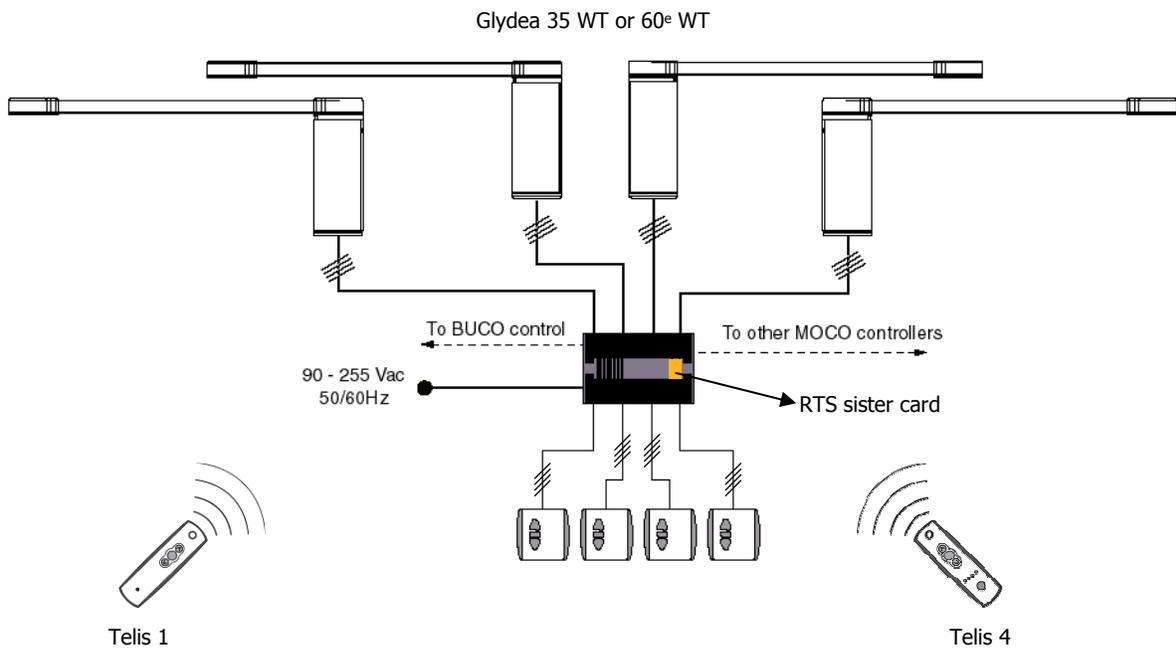

IV. GLYDEA INSTALLATION AND SETTING INSTRUCTIONS



Glydea

Installation Guide 1/4

MANDATORY SAFETY INSTRUCTIONS

For Glydea actuators intended for fabric curtain tracks installed horizontally, and for indoor use only

Any use outside the scope of application specified by SOMFY is non-compliant. SOMFY cannot be held liable for any such use or failure to observe

these instructions, which will also result in warranty being voided. Should any doubt arise during installation of the motor or in order to obtain

additional information, please visit the www.Somfy.com website or refer to your SOMFY contact (see branch details printed on this document).

IMPORTANT SAFETY INSTRUCTIONS FOR INSTALLATION

WARNING: improper installation may result in serious injury. Follow the installation instructions in full, as well as those shown in the enclosed user leaflet.

To be handed to the user.

The motor must be installed by an installer who is qualified in motorised systems and domestic automation.

The installer must inform the user of the need to arrange maintenance for the motorised unit and its associated accessories. He must specify items that

require maintenance, replacement or checking. The torque, operating time and speed of the SOMFY actuator must be compatible with the specifications of

the motorised unit: your SOMFY contact will provide a method of selecting motors for each application.

-Use only accessories (Curtain track, brackets, etc.) listed by SOMFY to fit to a unit. Part numbers for accessories are available from your SOMFY contact.

-Please refer to the SOMFY literature to ascertain the control point(s) compatible with the actuator selected.

-In areas subject to frequent power cuts it will be necessary to install an emergency facility or backup power supply.

-Fit control devices in visible positions.

-A multi-pole switching device must be provided further up the power supply, i.e. a device which electrically isolates each active conductor simultaneously

(minimum contact opening gap: 3.5 mm).

-Protect cables routed through a wall with an insulated cable bushing.

-If the cable or the power supply connector is damaged, return the actuator to the service department to avoid any risk.

-Secure the cables to prevent any contact with moving parts.

-Leave the power supply cable to the actuator accessible: it must be easily replaceable.

-To reduce the risk of electric shock, this equipment must have a proper grounding. Some Motors versions are supplied with a grounding type plug, that has

a third (grounding) pin. This plug will only fit into a grounding type outlet. If the plug does not fit into the outlet, contact a qualified electrician to install the

proper outlet. Do not change the plug in any way.

- A Motorized curtain track installation, equipped with two Glydea 60e motors, will be deemed safe if at least one of the following conditions is met (EN 13659 and EN 60 335-2-97)

-The motorised curtain track is controlled by a control point without locking, installed within sight of the closing but away from moving parts and at a height

of at least 1.50 m.

-The crush zone is located at a height in excess of 2.50 m from the ground or any permanent access level.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: it is important for everyone's safety to follow these instructions in full.

Keep these instructions for future reference.

-Your installer should inform you of any maintenance required.

-SOMFY recommends the presence of at least one control point close to the motorised unit or group of motorised units.

-Do not allow children to play with fixed control devices. Keep remote controls out of the reach of children.

-Do not use the emergency facility unless there is a mains power cut.

-Keep a watch on the motorised unit while it is moving and ensure that people stay clear until the motorised unit is fully closed.

-Disconnect the actuator from the power supply while maintenance work (e.g. window cleaning) is in progress in the vicinity.


-Check the system frequently in order to detect any out-of-balance condition or signs of wear. Do not use the motorised unit if it needs repair or adjustment.

-This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.


-Children should be supervised to ensure that they do not play with the appliance.

Glydea Installation Guide 2/4


A) Characteristics

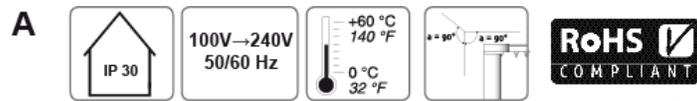

B) Measures

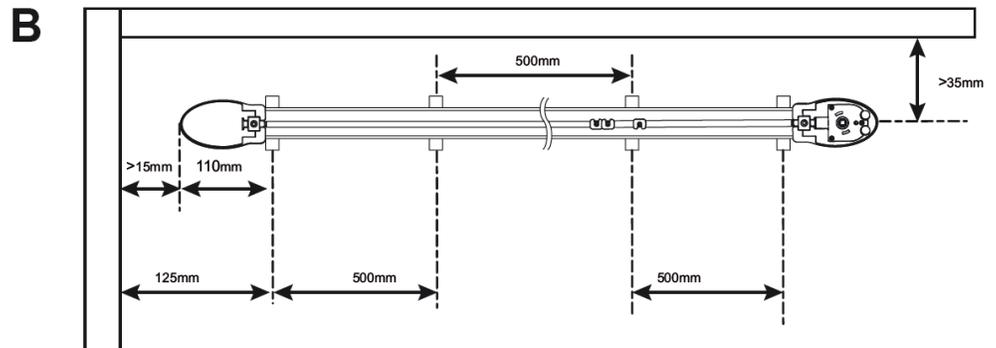


C) Installation of the rail

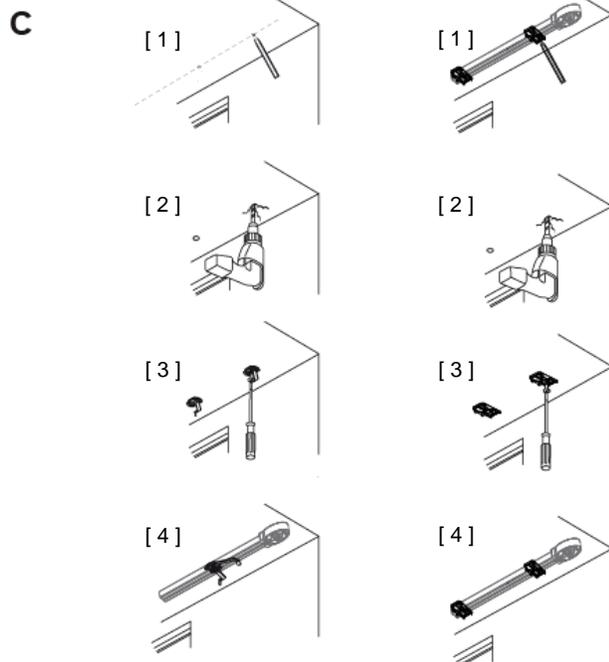

- [1] Mark the position of the bracket
- [2] Pierce the ceiling or the wall at the right places
- [3] Attach the brackets on it
- [4] Attach the rail on the bracket


Glydea Installation Guide 3/4

D) Power supply

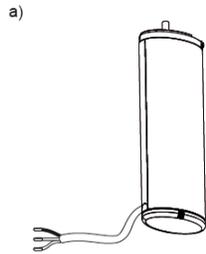


Cable output option:

a) By the bottom of the motor trough the notch of the wire cover

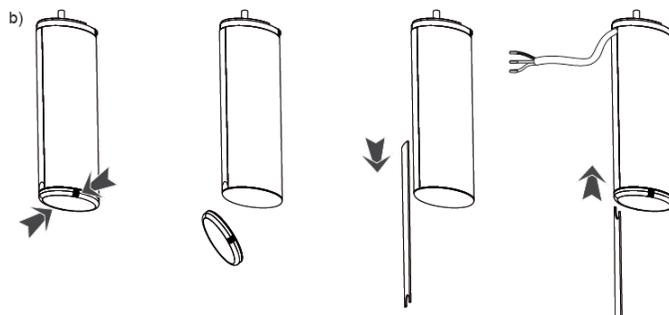

b) By the top of the motor trough the notch of the wire cover

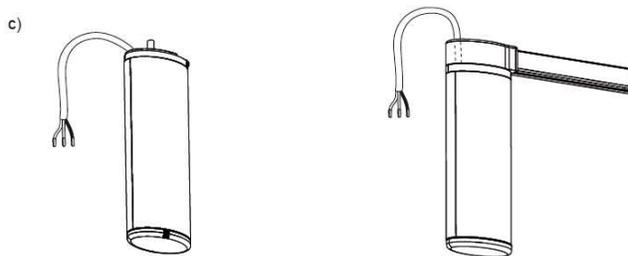

c) Through the pulley

E) Installation of the motor

- [1] Unlock the motor
- [2] Insert the motor shaft in the drive pulley hole
- [3] Lock the motor



Glydea

Installation Guide 4/4

F) Wiring of the motor

[1] DCT & RTS motors

Power wiring

2 or 3 NO dry Contact & IR:

1: CCW (Open) NO Dry contact

2: IR OUT

3: Ground Common


4: +5V

5: Stop - NO Dry contact

6: CW (Close) NO Dry contact


7: Optional module socket

	Wire	100 - 240V
1	Neutral	Blue
2	Live	Brown
3	Earth	Yellow/Green

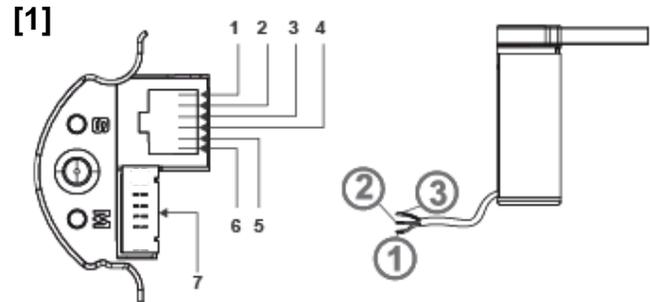

[2] Motors equipped with a US power plug

[2]

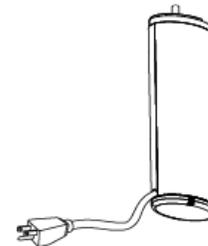


[3] WT motors (AC switching)

a] Switch paralele wiring not compatible


b] Ac switch wiring

	Wire	100 - 240V
1	Neutral	Blue
2	Live	Brown
3	Live	Black
4	Earth	Yellow/Green

[3a]

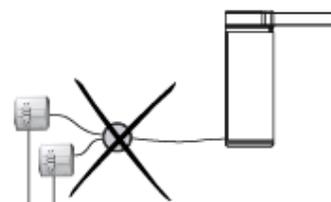

[3b]

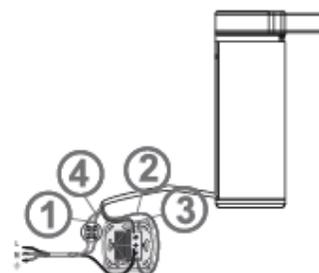


You can switch from a WT control mode (AC switching) to a DCT or/and RTS control mode by connecting the Black and Brown wires permanently to live

Glydea 35 DCT Programming Instructions 1/2

A) Compatible controls And control wiring

- 1) DCT setting tool
- 2) Centralis IB
- 3) 2 NO (Normally Open)
Dry contact switch
- 4) Somfy CS1
- 5) IR8
- 6) IR1
- 7) IR3 & RJ9/RJ12 adapter

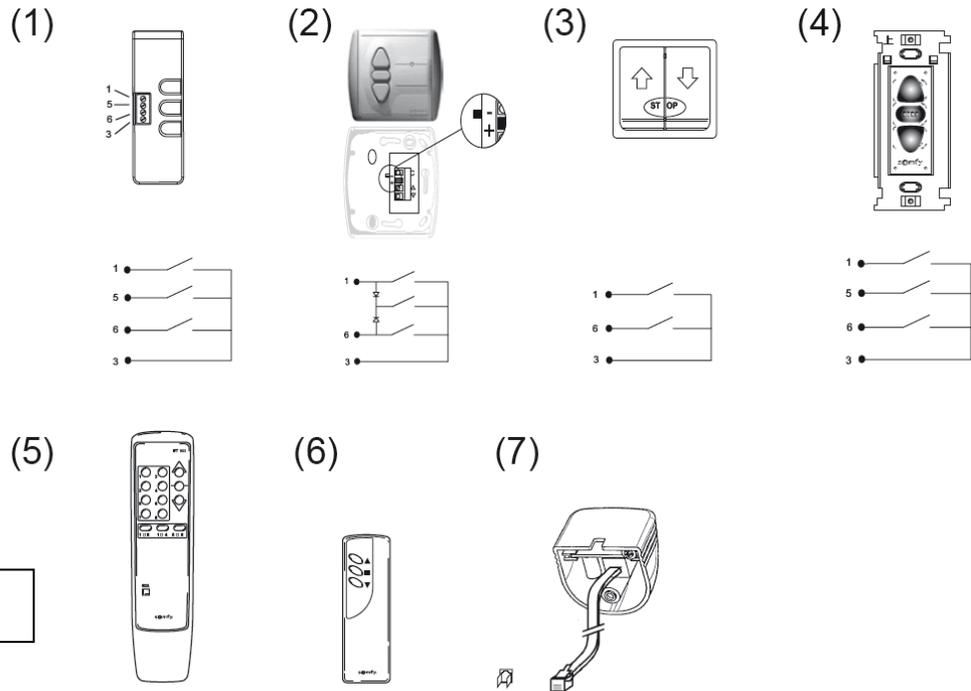

No parallele wiring of Glydea 35
DCT without DCT splitter


B) Assign / Deleting a channel for IR8 transmitter

Note: by factory default, the motor is paired to ALL channels on the transmitter. To designate one channel to a particular blind, the user must first delete unwanted channels.

-To enter in programming mode: Press on the transmitter prog. Button until the curtain jogs.

-To programm one channel: Press on key 1 and next on the key of the channel to program (1 to 8) or channel group until the curtain jogs.

-To exit programming mode: Press on the transmitter prog. Button until the curtain jogs.

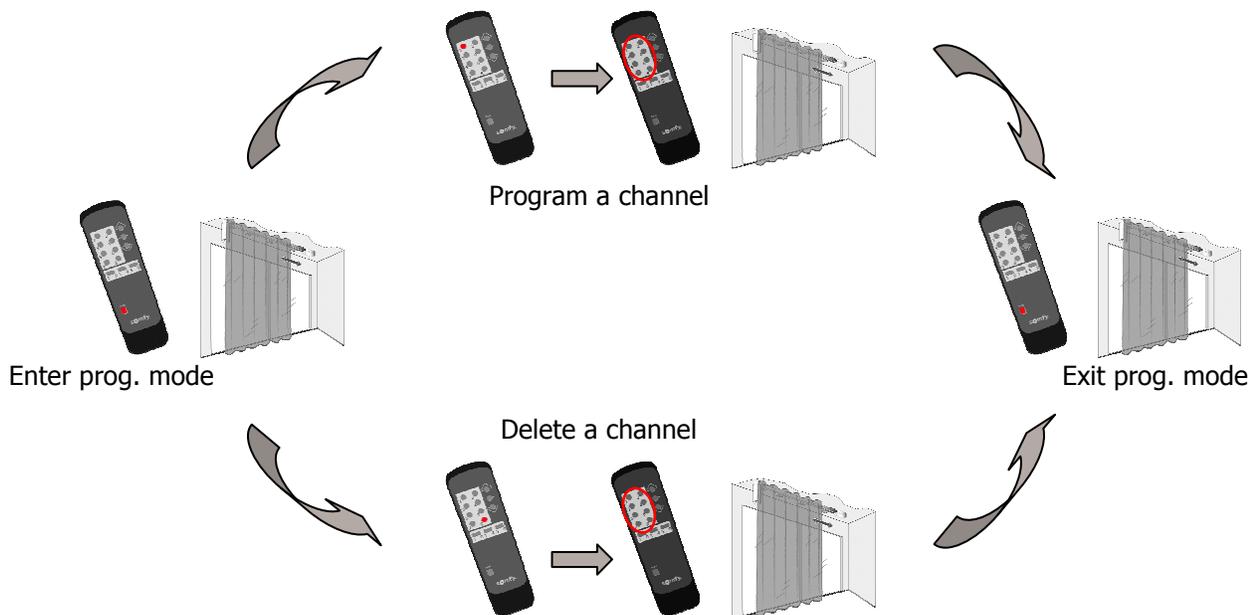

Glydea 35 DCT

Programming Instructions 2/2

C) Setting with 3 Normally open dry contact switches or IR control point Switch on the power supply.

C1. Modifying the motor rotation direction

Move the curtain away from the end limit.

- 1) Press the OPEN (UP), STOP and CLOSE (DOWN) buttons simultaneously until the curtain jogs.
- 2) Press the STOP button, until the curtain jogs to reverse the rotation direction.

C2. Dry contact ergonomics setting: Standard or 2 buttons sequencing

- 1) Press and hold the OPEN (UP), STOP and CLOSE (DOWN) buttons simultaneously until the curtain jogs.
- 2) Press the STOP and CLOSE (DOWN) buttons simultaneously until the curtain jogs to change the ergonomics.

C3. Back release setting

Move the curtain to the OPEN (UP) end limit

- 1) Press the STOP and CLOSE (DOWN) buttons simultaneously until the curtain jogs
- 2) Press and hold the CLOSE (DOWN) button to readjust the back release position
- 3) To confirm the new back release position, press and hold the STOP button until the curtain jogs


For accuracy the positioning must be done in one movement. If the position is not satisfactory, go through the all procedure again

To erase the back release position, set it on the hard stop limit

C4. Erasing the memory of the motor.

Press and hold the OPEN (UP), STOP and CLOSE (DOWN) buttons simultaneously until the curtain jogs 3 times.

All the settings are erased.


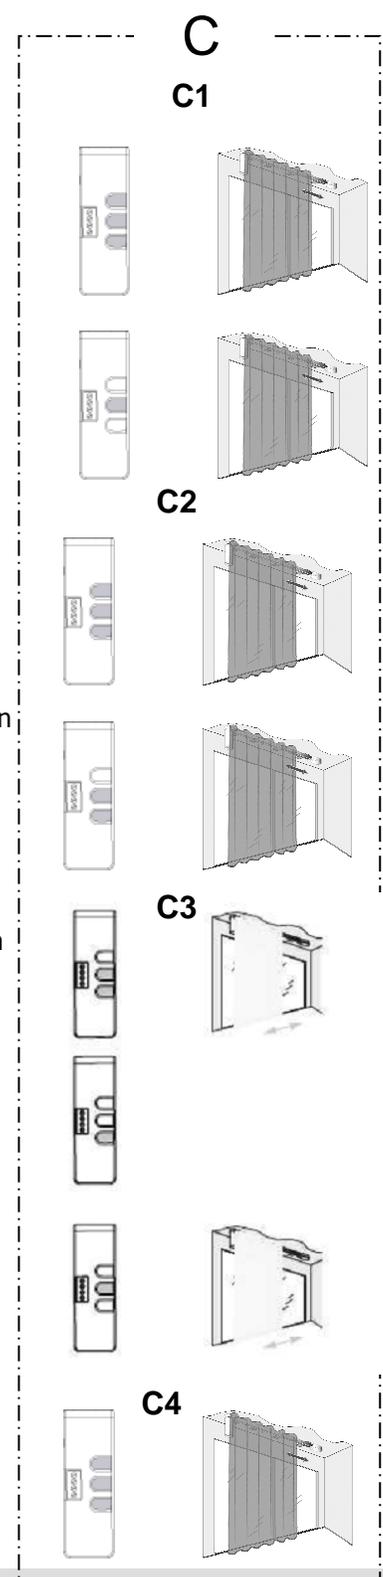


Glydea 60e DCT Programming Instructions 1/5



A) Compatible controls And control wiring

- 1) DCT setting tool
- 2) Centralis IB
- 3) 2 NO (Normally Open)
Dry contact switch
- 4) Somfy CS1
- 5) IR8
- 6) IR1
- 7) IR3 & RJ9/RJ12 adapter



(1)

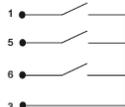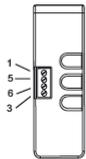



(2)

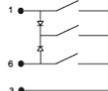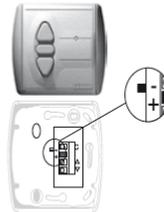

(3)

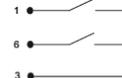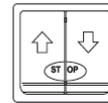

(4)

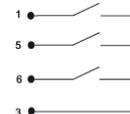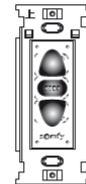

No parallele wiring of Glydea 35
DCT without DCT splitter


(5)



(6)



(7)

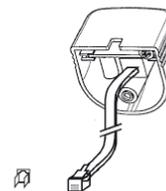

B) Setting with 3 NO (Normally Open) dry contact switches or IR control point Switch on the power supply.

After the first OPEN or CLOSE command, the curtain will
run at reduced speed to one end, then the other to set
the End Stops..

B1. Modifying the motor rotation direction

Move the curtain away from the end limits.

- 1) Press the OPEN (UP), STOP and CLOSE (DOWN) buttons
simultaneously until the curtain jogs.
- 2) Press the STOP button until the curtain jogs to reverse
the rotation direction.

(1)



(2)



Glydea 60e DCT

Programming Instructions 2/5

B2. End limit re-adjustment

a) OPEN LIMIT

- 1) Press the OPEN (UP) button, to move the curtain to the open limit.
- 2) Press and hold the OPEN (UP), STOP and CLOSE (DOWN) buttons simultaneously until the curtain jogs.
- 3) Press and hold the OPEN (UP) or CLOSE (DOWN) button to move the curtain to the new desired position.
- 4) To confirm the new limit press and hold the STOP button until the curtain jogs.

b) CLOSE LIMIT

- 1) Press the CLOSE (DOWN) button to move the curtain to the close limit.
- 2) Press and hold the OPEN (UP), STOP and CLOSE (DOWN) buttons simultaneously until the curtain jogs.
- 3) Press and hold the OPEN (UP) or CLOSE (DOWN) button to move the curtain to the new desired position.
- 4) To confirm the new limit press and hold the STOP button until the curtain jogs.

B3. Touch motion sensitivity


- 1) Press and hold the OPEN (UP), STOP and CLOSE (DOWN) buttons simultaneously until the curtain jogs.
- 2) Press the OPEN (UP), and CLOSE (DOWN) buttons simultaneously to switch from no touch motion to low sensitivity to high sensitivity and back to no touch motion.
- 3) Press the STOP button until the curtain jogs to confirm the setting.

B4. Dry contact ergonomics setting: Standard or 2 buttons sequencing

- 1) Press and hold the OPEN (UP), STOP and CLOSE (DOWN) buttons simultaneously until the curtain jogs.
- 2) Press the STOP and CLOSE (DOWN) buttons simultaneously until the curtain jogs to change the ergonomics.

B2




a)

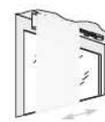



b)



B3

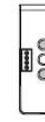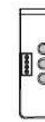

B4

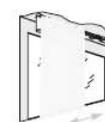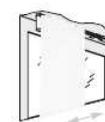

Glydea 60e DCT

Programming Instructions 3/5

B5. Speed setting

- 1) Press and hold the OPEN (UP) and STOP buttons simultaneously until the curtain starts to open and close
- 2) Press OPEN (UP) to increase the speed, CLOSE (DOWN) to decrease the speed
- 3) Press the STOP button until the curtain jogs to confirm the setting.

B6. MY position

- 1) Recording MY position.
To set the MY position, move the curtain to the desired position with the OPEN (UP) and CLOSE (DOWN) buttons then press the STOP button until the curtain jogs.
- 2) Delete the MY position
To delete the MY position, move to this position and press the STOP button until the curtain jogs.


B6



B7. Erasing the memory of the motor.

- Press and hold the OPEN (UP), STOP and CLOSE (DOWN) buttons simultaneously until the curtain jogs 3 times. All the settings are erased.

B7

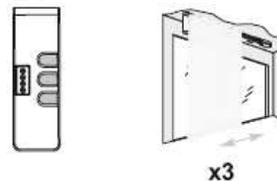

Glydea 60e DCT

Programming Instructions 4/5

C) Setting using the Mode and Set motor buttons and a two button NO (Normally Open) dry contact switch.

A Small paper clip is needed to press the Mode and Set buttons.

After the first OPEN or CLOSE command, the curtain will run at reduced speed to one end, then the other to set the End Stops.

C1. Press the M button until the green led switches on to enter in setting mode.

You can exit from the setting mode at any time, by pressing the M button until the LED switches off.

C2. Modifying the motor rotation direction

- 1) Press the S button to reverse the rotation direction.
Green LED ON = Open/CCW, Green LED blinking = Open/CW
- 2) Press the M button to confirm the change and go to the next step. The red light is on.

C3. Open End limit re-adjustment

- 1) Press and hold the OPEN (UP) or CLOSE (DOWN) button to move the curtain to the new desired position.
- 2) Press the S button to memorize the open limit, the curtain moves to the close limit. It can be stopped by pressing the stop (MY) button.
- 3) Press the M button to confirm the change and go to the next step. The red light flashes.

C4. Close End limits re-adjustment

- 1) Press and hold the OPEN (UP) or CLOSE (DOWN) button to move the curtain to the new desired position.
- 2) Press the S button to memorize the close limit, the curtain moves to the open limit. It can be stopped by pressing the stop (MY) button.
- 3) Press the M button to confirm the change and go to the next step. The Yellow LED is on or blinking.

C5. Touch motion sensitivity


- 1) Press the S button to switch from no touch motion (yellow LED is on) to low sensitivity (Yellow LED blinks) to high sensitivity (Yellow LED blinks quicker).
- 2) Press the M button to confirm and go to the next step. The led flashes alternatively from green to red and the curtain starts to open and close.

C6. Speed setting

- 1) Press the S button to switch the speed from 15 cm/s to 17.5 cm/s, to 20 cm/s, to 12.5 cm/s, and back to 15 cm/s
- 2) Press the M button to confirm and go back to direction setting. The green LED is on or blinking.

C7. Erasing the memory of the motor

Push the SET Button until the motor jogs 3 times and the Red LED turns on (12 seconds). It will light for 4 seconds, then the motor will reset.

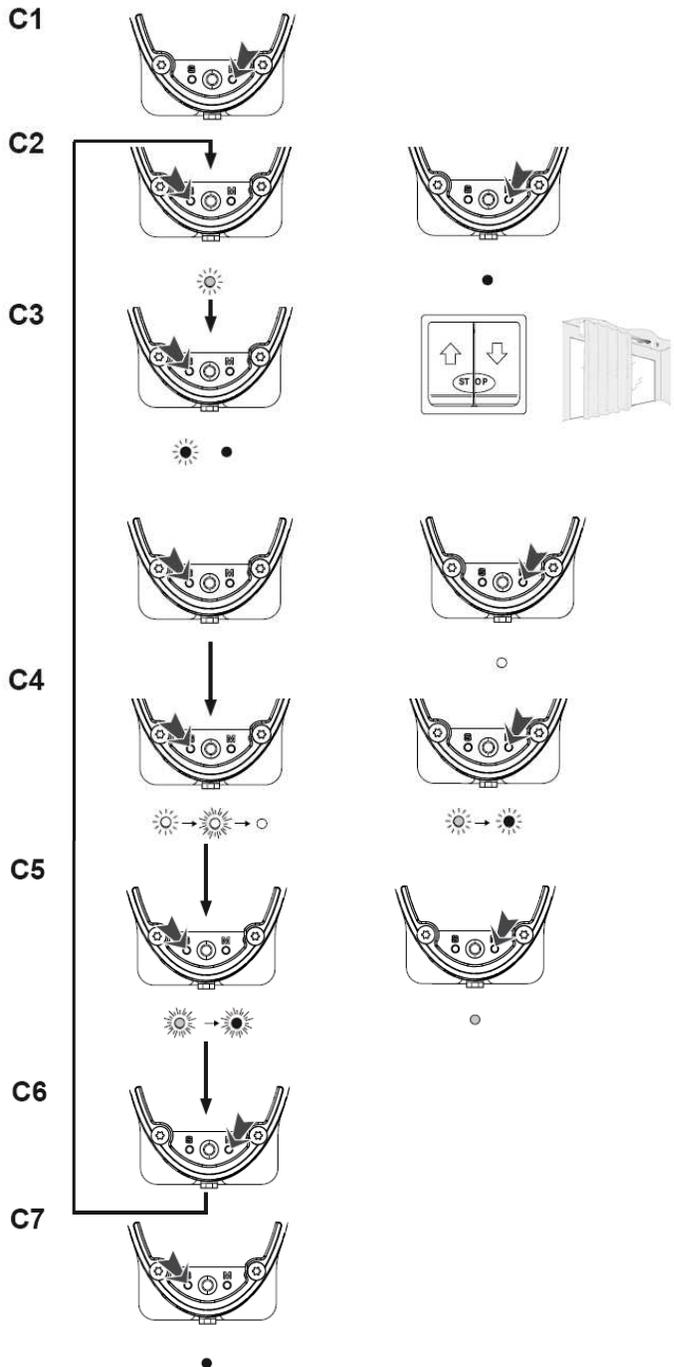

Glydea 60e DCT

Programming Instructions 5/5

D Assign/Deleting a channel for IR 8 transmitter

Note : to use a IR transmitter, you need to plug a IR sensor on the RJ 12 motor plug.

D1 Assign a channel


Note : By factory default, the motor is paired to ALL channels on the transmitter.

To designate one channel to a particular blind, the user must first delete unwanted channels (see step DELETE A CHANNEL).

To enter in programming mode: Press on the transmitter prog button until the curtain jogs.

To program one channel : press on key 1 and next on the key of the channel to program (1 to 8) or channel group until the curtain jogs.

To exit programming mode: press on the transmitter prog button until the curtain jogs.

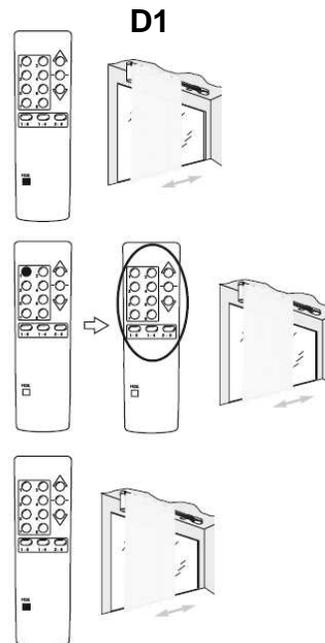


D2 Delete a channel

To enter in programming mode: Press on the transmitter prog button until the curtain jogs.

To erase one channel: press on key 8 and next on the key of the channel to remove (1 to 8) or channel group until the curtain jogs.

To erase all channels: press on key 8 and next on key 1_8 until the motor curtain jogs.

To exit programming mode : press on the transmitter prog button until the curtain jogs.

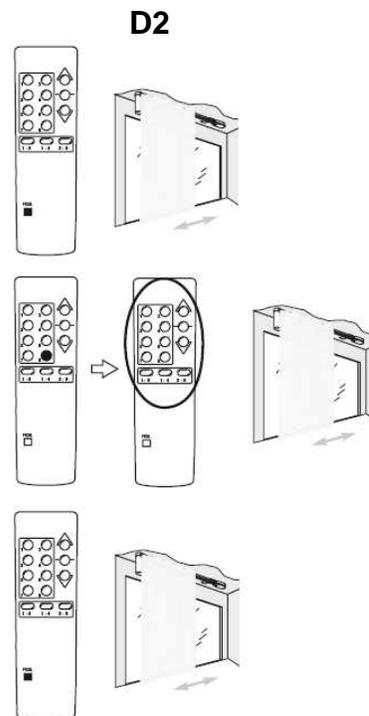

Glydea RTS Receiver Programming Instructions 1/6

Compatible controls




Installing the receiver

- 1) Select the corresponding frequency
Only on the Asian version:
RTS ASIA RECEIVER GLYDEA #1870173


COUNTRY CONFIGURATION			
COUNTRY	FREQUENCY	CHANNEL 1	CHANNEL 2
JAPAN	426,0625 MHz	OFF	OFF
HONG KONG	409,9875 MHz	OFF	ON
KOREA	447,7 MHz	ON	ON



- 2) Slide the RTS receiver into the notch (a)

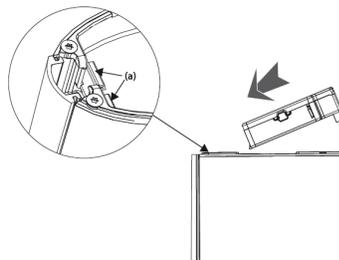


- 3) Clip the RTS receiver into the plug (b)

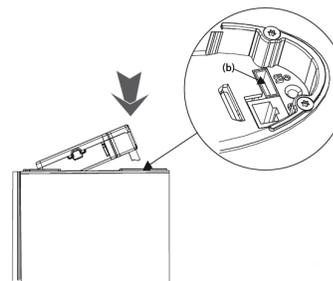

Glydea RTS Receiver Programming Instructions 2/6

Programming the RTS control point

Switch on the power supply.
Press the OPEN (UP) and CLOSE (DOWN) buttons simultaneously on the RTS control point: the curtain jogs and the control point is preprogrammed in the motor.

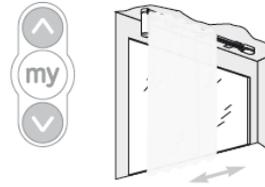


GLYDEA 60e RTS only

The curtain makes a first run to record the hard stop positions at first command.


Checking the direction of rotation

- 1) Press the RTS control point OPEN (UP) button:
 - a) If the curtain opens, the direction of rotation is correct
 - b) If the curtain closes, the direction of rotation is incorrect: move to the next step.
- 2) Press the RTS control point MY button until the curtain jogs: the direction of rotation has been modified.
- 3) Press the RTS control point OPEN (UP) button to check the direction of rotation.

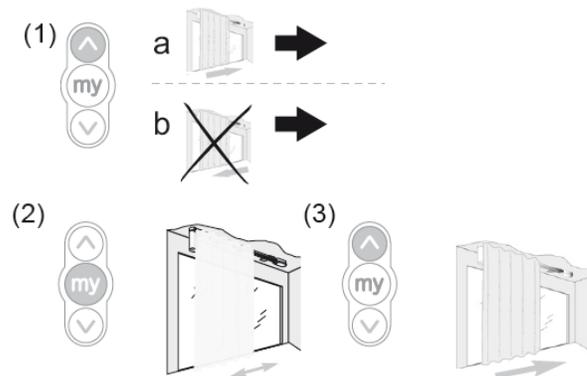

Recording the RTS control point

Press the programming button on the back of the RTS control point until the motor jogs. The RTS control point address is permanently recorded.

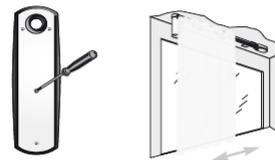

Glydea RTS Receiver Programming Instructions 3/6

Back release setting

GLYDEA 35 RTS only


Move the curtain to the OPEN end limit.

- 1) Press the MY and CLOSE (DOWN) buttons simultaneously until the curtain jogs.
- 2) Press the CLOSE (DOWN) button to readjust the back release position.
- 3) To confirm the new back release position, press and hold the MY button until the curtain jogs.

For accuracy the positioning must be done in one movement.

If the position is not satisfactory, go through the all procedure again.

- 4) To erase the back release position, set it on the hard stop limit.

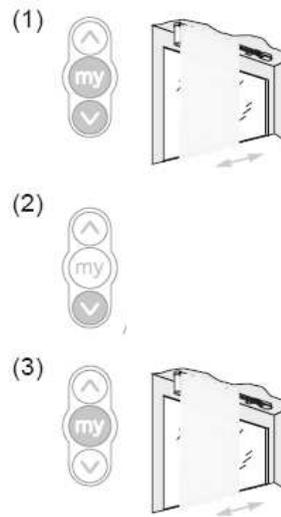

MY position


GLYDEA 60e RTS only

- 1) Recording MY position.

To set the MY position, move the curtain to the desired position with the UP and DOWN buttons then press the MY button until the curtain jogs.

- 2) Delete the MY position

To delete the MY position, move to this position and press the MY button until the curtain jogs.

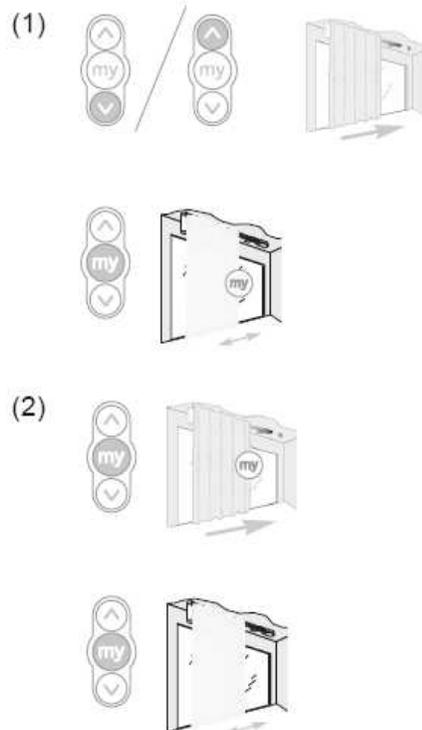

Glydea RTS Receiver Programming Instructions 4/6

End limit re-adjustment GLYDEA 60e RTS only


a) OPEN (UP) LIMIT

- 1) Press the OPEN (UP) button, to move the curtain to the limit to be readjusted.
- 2) Press and hold the OPEN (UP) and CLOSE (DOWN) buttons simultaneously until the curtain jogs.
- 3) Press and hold the OPEN (UP) or CLOSE (DOWN) button to move the curtain to the new desired position.
- 4) To confirm the new limit press and hold the MY button until the curtain jogs.


b) CLOSE LIMIT

- 1) Press the CLOSE (DOWN) button to move the curtain to the limit to be readjusted.
- 2) Press and hold the OPEN (UP) and CLOSE (DOWN) buttons simultaneously until the curtain jogs.
- 3) Press and hold the OPEN (UP) or CLOSE (DOWN) button to move the curtain to the new desired position.
- 4) To confirm the new limit press and hold the MY button until the curtain jogs.

a

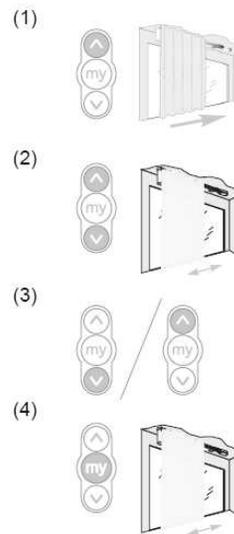

b

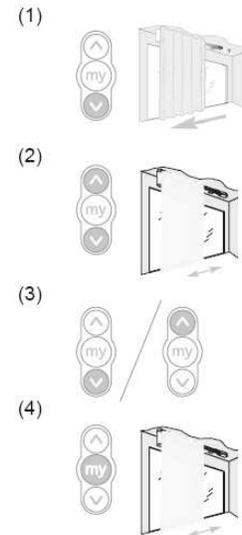


Modifying the motor rotation direction

Glydea 35 RTS and Glydea 60e RTS

Move the curtain away from the end limits.


- 1) Press the OPEN (UP) and CLOSE (DOWN) buttons simultaneously until the curtain jogs.
- 2) Press the MY button until the curtain jogs to reverse the rotation direction.

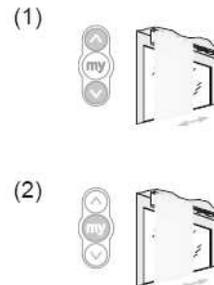

Dry contact ergonomics setting

Glydea 35 RTS and Glydea 60e RTS

- 1) Press the OPEN (UP) and CLOSE (DOWN) buttons simultaneously until the curtain jogs.
- 2) Press the MY and CLOSE (DOWN) buttons simultaneously until the curtain jogs to change the ergonomomy.

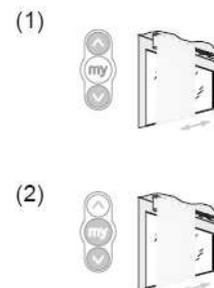

Glydea RTS Receiver Programming Instructions 5/6

Touch motion sensitivity GLYDEA 60e RTS only

- 1) Press and hold the OPEN (UP) and CLOSE (DOWN) buttons simultaneously until the curtains jogs.
- 2) Press the OPEN (UP) and CLOSE (DOWN) buttons simultaneously until the curtain jogs to switch from no touch motion to low sensitivity; to high sensitivity and back to no touch motion.
- 3) Press the STOP button until the curtain jogs to confirm the setting.

Speed setting GLYDEA 60e RTS ONLY

- 1) Press and hold the OPEN (UP) and STOP buttons simultaneously until the curtain starts to open and close
- 2) Press OPEN (UP) to increase the speed, CLOSE (DOWN) to decrease the speed
- 3) Press the STOP button until the curtain jogs to confirm the setting.


Adding/Deleting RTS control points

Glydea 35 RTS and Glydea 60e RTS

Find an RTS control point programmed in the motor.

Press and hold the RTS programmed control point (A) PROG button or the receiver PROG button until the curtain jogs: the motor is in programming mode.

Quickly press the RTS control point (B) PROG button to add or delete: the curtain jogs and the RTS control point is programmed or deleted from the motor.

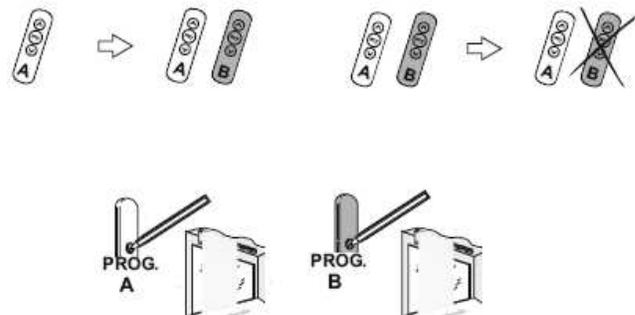


Glydea RTS Receiver Programming Instructions 6/6

Adding/Deleting RTS sensors

Find an RTS control point programmed in the motor.

Press and hold the RTS programmed control point (A) PROG button or the receiver PROG button until the curtain jogs: the motor is in programming mode.

Quickly press the sensor (C) PROG button to add or delete: the curtain jogs and the RTS sensor is programmed or deleted from the motor.


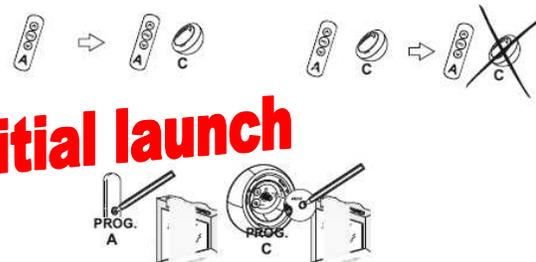


Not available at initial launch

Erasing the transmitters of the motor

To delete all the transmitters programmed, press and hold the receiver prog button until the curtain jogs twice.

All the transmitters are deleted.

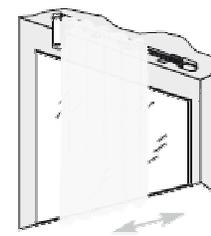
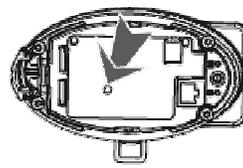


x2

Erasing the memory of the motor

To reset the motor, press the receiver prog button until the curtain jogs 3 times.

All the settings are erased.

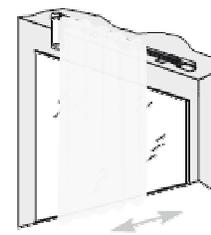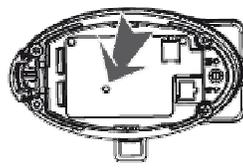

x3

Glydea Dry Contact & Glydea RTS Setting Sum Up


	Default Values	Dry contacts setting			RTS setting			Comments
		Enter	Set	Confirm and Exit	Enter	Set	Confirm and Exit	
Direction change	Open CCW	Not at end limits Open+Stop+Close 4s 1 jog		Stop 2s to change & exit 1 jog	In Temporary mode Not at end limits Open+Close 4s 1 jog	Open and Close operationnal	Stop 2s to change direction	Not at end limits for Glydea 60e because conflict with Limit setting.
Back release	No Back release set	at open limit Stop+Close 4s 1 jog	Open or close to position curtain	Stop 2s 1 jog	at open limit Stop+Close 4s	Open or close to position curtain	Stop 2s to change & exit 1 jog	
Open Limit setting	No end limits set	at open limits Open+Stop+Close 4s 1 jog	Open or close to position curtain	Stop 2s 1 jog	at open limits Open+Close 4s 1 jog	Open or close to position curtain	Stop 2s 1 jog	Limit management mode is erased if setting is done at hard Stop
Close limit setting	No end limits set	at close limits Open+Stop+Close 4s 1 jog	Open or close to position curtain	Stop 2s 1 jog	at close limits Open+Close 4s 1 jog	Open or close to position curtain	Stop 2s 1 jog	Limit management mode is erased if setting is done at hard Stop
Dry contact ergonomics	Standard	Open+Stop+Close 4s 1 jog		Stop+Close 2s to change and exit 1 jog	Open+Close 4s 1 jog		Stop+Close 2s to change and exit 1 jog	
Speed setting	15 cm/s (fo a 6 m trach 35 KG)	Open+stop 4s 1 jog	Open to increase speed, Close to decrease speed	Stop 2s 1 jog	Open+stop 4s 1 jog	Open to increase speed, Close to decrease speed	Stop 2s 1 jog	Touch motion function should be active in setting mode to test
Touch Motion	No touch Motion active	Open+Stop+Close 4s 1 jog	Open+Close 2s to switch to different sensitivity (loop)	Stop 2s 1 jog	Open+Close 4s 1 jog	Open+Close 2s to switch to different sensitivity (loop)	Stop 2s 1 jog	
Exit setting mode any time		Open+Stop+Close less than 2s			Open+Stop+Close less than 2s			
Fractory reset		Open+Stop+Close 12s 3 jogs			Receiver prog. buton 12s 3 jogs			

Glydea 35 WT

Programming Instructions

A) Compatible controls - Wiring of control ^A

- 1) Inis Uno
- 2) Série espace
- 3) Centralis Uno IB

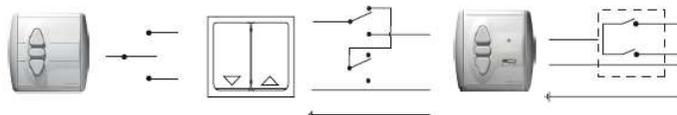

B) Setting with 3 Normally open dry contact switches or IR control point.


Switch on the power supply.

Setting can be done only when one of the 2 live wires are connected permanently to the power

B1. Modifying the motor rotation direction

- 1) Press the OPEN (UP), STOP and CLOSE (DOWN) buttons simultaneously until the curtain jogs.
- 2) Press the STOP button until the curtain jogs to reverse the rotation direction.

B1

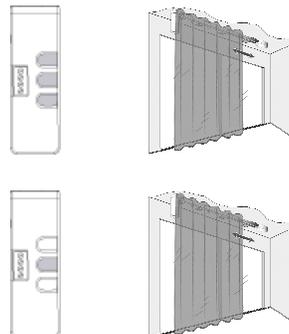


B2. Back release setting

- Move the curtain to the OPEN end limit
- 1) Press the STOP and CLOSE (DOWN) buttons simultaneously until the curtain jogs
 - 2) Press and hold the CLOSE (DOWN) button to readjust the back release position
 - 3) To confirm the new back release position, press and hold the STOP button until the curtain jogs
- For accuracy the positioning must be done in one movement. If the position is not satisfactory, go through the all procedure again
- 4) To erase the back release position, set it on the hard stop limit

B3

B3. Erasing the memory of the motor.

- Press and hold the OPEN (UP), STOP and CLOSE (DOWN) buttons simultaneously until the curtain jogs 3 times.
- All the settings are erased.

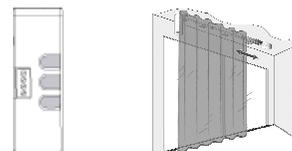


Glydea 60e WT

Programming Instructions 1/2

A) Compatible controls - Wiring of control A

- 1) Inis Uno
- 2) Série espace
- 3) Centralis Uno IB

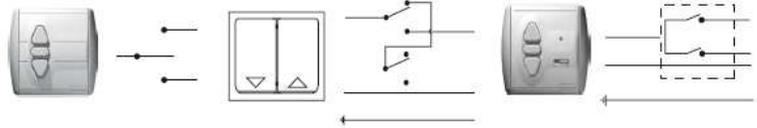

B Setting with 3 NO (Normally Open) dry contact switches. Power the motor in one direction.


The curtain makes a first run at low speed to record the hard stop positions.

Setting can be done only when one of the 2 live wires are connected permanently to the power.

B1. Modifying the motor rotation direction

- 1) Press the OPEN (UP), STOP and CLOSE (DOWN) buttons simultaneously until the curtain jogs.
- 2) Press the STOP button until the curtain jogs to reverse the rotation direction.


B1

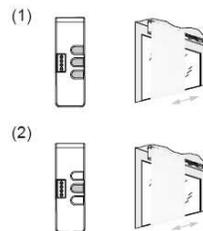

B2. Back release setting

- Move the curtain to the OPEN end limit.
- 1) Press the STOP and CLOSE (DOWN) buttons simultaneously until the curtain jogs.
 - 2) Press and hold the OPEN (UP) or CLOSE (DOWN) button to readjust the back release position.
 - 3) To confirm the new back release position, press and hold the STOP button until the curtain jogs.
- To erase the back release position, set it on the hard stop limit.

B2

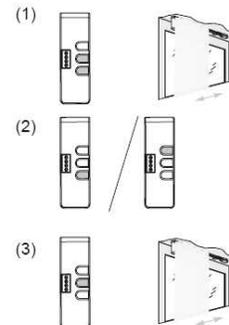


B3. Speed setting

- 1) Press and hold the OPEN (UP) and STOP buttons simultaneously until the curtain starts to open and close
- 2) Press OPEN (UP) to increase the speed, CLOSE (DOWN) to decrease the speed
- 3) Press the STOP button until the curtain jogs to confirm the setting

B4. Erasing the memory of the motor.

- Press and hold the OPEN (UP), STOP and CLOSE (DOWN) buttons simultaneously until the curtain jogs 3 times.
- All the settings are erased.

B4

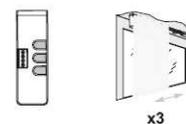

Glydea 60e WT

Programming Instructions 2/2

C) Setting with the motor buttons and a AC switching control

A small paper clip is needed to press the Mode and Set buttons.
Power the motor in one direction during setting

The curtain will run at low speed to one end limit and then return to set both End Stop positions. It will then go back at normal speed.

Leave the motor powered in the same direction until it has finished this process

C1. Press the M button until the green LED switches on to enter setting mode. You can exit from the setting mode at any time, by pressing the M button until the LED switches off.

C2. Modifying the motor rotation direction

1) Press the S button to reverse the rotation direction

Green LED ON = Open / CCW

Green LED blinking = Open / CW

2) Press the M button to confirm the change and go to the next step. The red light is on

C3. Back release setting

Move the curtain to the OPEN (UP) end limit

1) Press the S button in sequencing mode to adjust the back release position

2) Press the M button to confirm the new back release position

The LED flashes alternatively from green to red and the curtain starts to open and close

C4. Speed setting

1) Press the S button to switch the speed from 15 cm/s to 17.5 cm/s, to 20 cm/s, to 12.5 cm/s, and back to 15cm/s


2) Press the M button to confirm and go back to direction setting

The green LED is on or blinking

C5. Erasing the memory of the motor

Push the SET button until the motor jogs 3 times and the red LED turns on (12 seconds)

It will light for 4 seconds, then the motor will reset

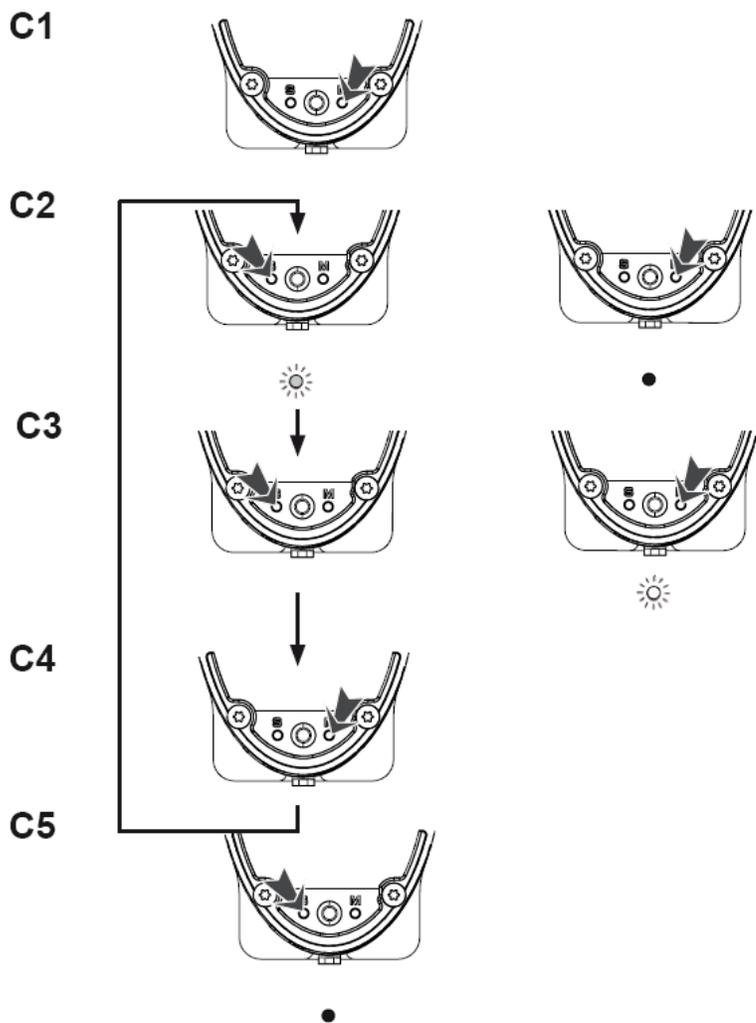


Glydea Up Side Down Mount Installation Instructions

Not Qualified Yet



Not Qualified Yet

V. Glydea 60^e TANDEM

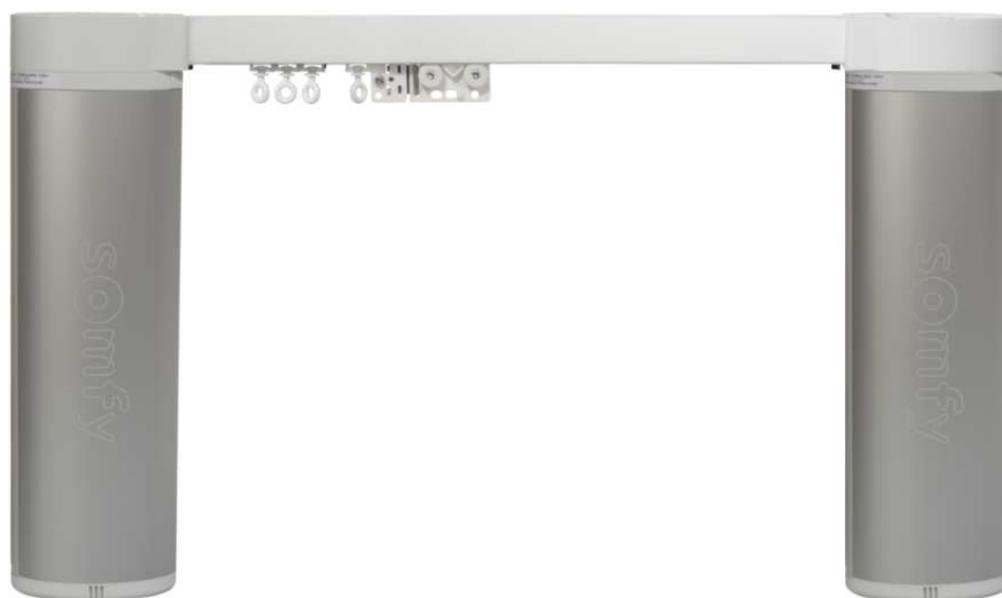

Technical Datasheet Glydea Tandem Module



Subject to change without prior notice

62 Databook Glydea R0PR9 / 2010-06-23

somfy[®]

VI. GLYDEA PART LIST



Part List

Glydea 35 Motors

	Somfy Part Number	Description	Detailed Description	Where
	1001261	GLYDEA 35 DCT EU 1,5M	Glydea motor with 35 kg capacity for a 6 m 2 way straight track, Dry contact and IR control capability and equipped with a 1,5 m 3 wire EU cable. CE, CCC, TUV GS, SASO, C-tick Unit weight: 1280g	HDI / LI
	1001525	GLYDEA 35 WT EU 1,5M	Glydea motor with 35 kg capacity for a 6 m straight track, AC switching control capability and equipped with a 1,5 m 4 wire EU cable. CE, CCC, TUV GS, SASO, C-tick Unit weight: 1280g	HDI / LI
	1001536	GLYDEA 35 DCT US 10' + PLUG	Glydea motor with 35 kg capacity for a 6 m 2 way straight track, Dry contact and IR control capability and equipped with a 10 ft. UL power cord and a grounded US plug. cTUVus, Unit weight: 1280g	HDI
	1001263	GLYDEA 35 RTS 433 EU 1,5M	Glydea motor with 35 kg capacity for a 6 m 2 way straight track, Dry contact and IR control capability and equipped with a 1,5 m 3 wire EU cable, and with a RTS 433 module CE, CCC, TUV GS, SASO, C-tick	BU's
	1001614	GLYDEA 35 RTS ASIA EU 1,5M	Glydea motor with 35 kg capacity for a 6 m straight track, Dry contact and IR control capability and equipped with a 1,5 m 3 wire EU cable, and with a RTS asian frequencies module CE, CCC, TUV GS, SASO, C-tick Unit weight: 1280g	BU's
	1001615	GLYDEA 35 RTS US 10' + PLUG	Glydea motor with 35 kg capacity for a 6 m 2 way straight track, Dry contact and IR control capability and equipped with a 10' cable and a grounded us plug and with a RTS 433 module cTUVus	BU's

Part List

Glydea 60e Motors

	Somfy Part Number	Description	Detailed Description	Where
	1001265	GLYDEA 60e DCT EU 1,5M	High performance Glydea motor with 60 kg capacity for a 10 m 2 way straight track, Dry contact and IR control capability and equipped with a 1,5 m 3 wire EU cable. CE, CCC, TUV GS, SASO, C-tick Unit weight: 1280g	HDI / LI
	1001537	GLYDEA 60e WT EU 1,5M	High performance Glydea motor with 60kg capacity for a 10 m 2 way straight track, AC switching control capability and equipped with a 1,5 m 4 wire EU cable. CE, CCC, TUV GS, SASO, C-tick Unit weight: 1280g	HDI / LI
	1001538	GLYDEA 60e DCT US 10' + PLUG	High performance Glydea motor with 60 kg capacity for a 10 m 2 way straight track, Dry contact and IR control capability and equipped with a 10' UL approved power cord and a US plug. cTUVus	HDI
	1001539	GLYDEA 60e DCT EU 1,5M JAPAN	High performance Glydea motor with 60 kg capacity for a 10 m 2 way straight track, Dry contact and IR control capability and equipped with a 1,5 m 3 wire VVF cable. Motor supplied with no touch motion capability CE, CCC, TUV GS, SASO, C-tick Unit weight: 1280g	HDI
	1001264	GLYDEA 60e RTS 433 EU 1,5M	High performance Glydea motor with 60kg capacity for a 10 m 2 way straight track, Dry contact and IR control capability and equipped with a 1,5 m 4 wire EU cable, and with a RTS 433 module CE, CCC, TUV GS, SASO, C-tick Unit weight: 1280g	BU's
	1001616	GLYDEA 60e RTS ASIA EU 1,5M	High performance Glydea motor with 60kg capacity for a 10 m 2 way straight track, Dry contact and IR control capability and equipped with a 1,5 m 4 wire EU cable, and with a RTS asian frequencies module CE, CCC, TUV GS, SASO, C-tick Unit weight: 1280g	BU's
	1001617	GLYDEA 60e RTS US 10' + PLUG	High performance Glydea motor with 60 kg capacity for a 10 m 2 way straight track, Dry contact and IR control capability and equipped with a 10' UL approved power cable with a grounded US plug, and with a RTS 433 module cTUVus	BU's
	1001618	GLYDEA 60e RTS426 EU 1,5M JP	High performance Glydea motor with 60kg capacity for a 10 m 2 way straight track, Dry contact and IR control capability and equipped with a 1,5 m 4 wire EU cable, and with a RTS asian frequencies module Motor supplied with no touch motion capability CE, CCC, TUV GS, SASO, C-tick Unit weight: 1280g	Somfy Japan

Subject to change without prior notice

Part List

Control Modules



	Somfy Part Number	Description	Detailed Description	Where
	1870172	RTS 433 RECEIVER GLYDEA	Plug-in RTS 433 MHz receiver. Can be plugged in by the installer into a Glydea 35 DCT or Glydea 60e DCT to be controlled by most RTS 433 MHz transmitters CE	HDI / LI
	1870173	RTS ASIA RECEIVER GLYDEA	Plug-in RTS Asian frequency receiver. The receiver is from the factory in 426 MHz radio frequency. But it can be set to 409 MHz and 447 MHz through 2 dipswitches. Can be plugged in by the installer into a Glydea 35 DCT or Glydea 60e DCT to be controlled by most RTS 426, 409 and 447 MHz transmitters CE	HDI
	9015442	DCT SPLITTER GLYDEA	Unit equipped with 2 RJ12, screw terminal blocks and diodes. Used for individual, group or master control with 2 NO dry contact switches or IR	HDI / LI

The control module range will be completed by the end of 2010 by :

	1870182	TANDEM MODULE GLYDEA	Control module used to interface two Glydea 60e DCT motors used in Tandem on the same track to reach up to 100 kg on a 10m 2 way straight track. The module allows the management of the limits of the 2 motors.	HDI / LI
	1870181	RS485 MODULE GLYDEA	Pug-in control module with a RS485 port. Can be plugged in by the installer into a Glydea 35 DCT or Glydea 60e to interface Somfy bi directional network	HDI / LI

Part List

Track Components

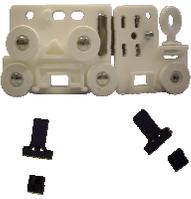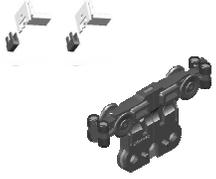	Somfy Part Number	Description	Detailed Description	Where
	1780897	PULLEY GA	Pulley assembly to put opposite the motor side. Doesn't come with hooks Unit weight: 82g	HDI / LI
	1780945	DRIVE PULLEY GA	Pulley assembly to use on the motor side. Color white Doesn't come with hooks Unit weight: 73g	HDI / LI
	1780899	RAIL 16 ft BY 6 GA	16 FT long Glydea track aluminum profile. Color white Delivered in a box with 6 rails	HDI
	1781379	RAIL 5M BY 4 GA	5 m long Glydea track aluminum profile. Color white Delivered in a box with 4 rails	LI
	1780900	10 MM BELT 100M ROLL GA	Roll of 100 m ,10 mm T5 timing belt, with 5 steel tension cords and textile on the back and the tooth. Approx. 2 times the length of the track is necessary Quantity in standard package: a roll of 100 m in a plastic bag)	HDI / LI
	1780890	MASTER CARRIER GA35	Articulated master carrier suited for curtain weight up to 35 kg for 6m straight tracks, 15 kg for 6 m 1 bent track	HDI / LI
	1781344	HEAVY DUTY MASTER CARRIER GA	Heavy Duty and quiet one piece non articulating master carrier. Can be used on all track configurations and shape including ripple curtain to the maximum weight capacity of Glydea 60e	HDI / LI
	1780891	RAIL JOINT GA	Mettalic plate to link 2 rails when track length is more than 5140 mm, or for tracks with bends. Supplied with 4 screws mounted Color: Zinc plated Unit weight: 62g	HDI / LI


Part List

Standard Heading Accessories

	Somfy Part Number	Description	Detailed Description	Where
	1780892	ROTATING EYE RUNNER GA	Runner mounted on Wheels w/ rotating Eyelet. Can not be used w/ ripplefold. Width 14mm Max load 1.5kg Qty: Typical 10 per meter. Color: White Unit wt.: 3.2g	HDI / LI
	1781415	HIGH PERF ROTATING EYE RUNNER	Runner mounted on Wheels w/ rotating Eyelet. Wheels shape make it quieter Width 14mm Max load 1.5kg Qty: Typical 10 per meter. Color: White Unit weight: 3.2g	HDI / LI
	1780894	STRAIGHT ARM GA35	Steel Straight arm to be used in combination with the Master Carrier GA35 in a one way system Supplied w/ screws Color: Zinc Plating Unit wt.: 29g	HDI / LI
	1780893	OVERLAP ARM GA35	Stainless steel overlap arm to be used in combination with the Master Carrier GA35 in a two way system when blackout is needed Color: Zinc Plating Unit wt.: 29g	HDI / LI
	1781416	HEAVY DUTY STRAIGHT ARM GA	Stainless steel arm to be optionally screwed on the Heavy Duty Master Carrier of two way tracks. Allows to hang curtains with pleates with 3" pitch Unit weight: 29g	HDI / LI
	1781417	HEAVY DUTY OVERLAP ARM KIT GA	Stainless steel Overlap arm with roller wheel to be used on the Heavy Duty Master Carrier on one way tracks or on a two way system when additional blackout is needed	HDI / LI
	1780895	MOTOR HOOK GA	Plastic hooks to hang the curtain on the Pulleys. Quantity needed is minimum 1 for 1 way tracks and 2 for 2 way. More might be needed. Color: White Weight: 2.3g	HDI / LI

Part List

Ripplefold Accessories

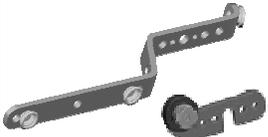
	Somfy Part Number	Description	Detailed Description	Where
 	1780901	RIPPLE RUNNER 1 7/8" GA	Runner mounted on wheels for 120% fullness ripple curtains Supplied in a roll of 500 runners. Cord already snapped on the runner body. 500 snap pendants supplied in a different bag Width 14 mm maximum load 1.5kg Quantity: usually 21/m	HDI / LI
	1780902	RIPPLE RUNNER 2 1/8" GA	Runner mounted on wheels for 100% fullness ripple curtains Supplied in a roll of 500 runners. Cord already snapped on the runner body. 500 snap pendants supplied in a different bag Width 14 mm maximum load 1.5kg Quantity needed: usually 19/m	HDI / LI
	1780903	RIPPLE RUNNER 2 3/8" GA	Runner mounted on wheels for 80% fullness ripple curtains Supplied in a roll of 500 runners. Cord already snapped on the runner body. 500 snap pendants supplied in a different bag Width 14 mm maximum load 1.5kg Quantity: usually 17/m	HDI / LI
	1780905	RIPPLE MOTOR HOOK GA	Specific plastic hook with a female snaps to use for ripple curtains. Color white Unit weight: 2,3g	HDI / LI
	1780946	RIPPLE STRAIGHT ARM	Stainless steel arm to be screwed on the Heavy Duty Master Carrier of two way tracks when a Ripple curtain with overlap solution is needed.	HDI / LI
	1780947	RIPPLE OVERLAP ARM KIT	Stainless steel Overlap arm with roller wheel to be used with the Heavy Duty Master on one way tracks or on a two way ripple curtain with overlap	HDI / LI
	1780953	RIPPLEFOLD BUTT ARMS KIT	Steel arms kit to be used with Master carrier GA60 on 2 way tracks with butt arms 2 kits are needed for 2 way tracks	HDI / LI

Part List Brackets

	Somfy Part Number	Description	Detailed Description	Where
	1780906	SWIVEL CEILING BRACKET GA	Swivel ceiling bracket. Minimized light gap (2 mm) Color Zinc Plated Minimum quantity necessary: 2,5/m Unit weight: 12.5g	HDI / LI
	1780907	ONE TOUCH CEILING BRACKET GA	Ceiling bracket allows for easy positionning of the fixing holes and snap on mounting of the track Color: white Minimum quantity necessary: 2,5/m Unit weight: 20g	HDI / LI
	1780909	ADJ. WALL MOUNT BRACKET GA	Wall mount angle bracket with minimum 100 mm projection and 34 mm extension capability. Can be used in combination with ceiling brackets #1780906 and #1780907 Supplied with the screws to fix one ceiling brackets (No ceiling bracket supplied) Minimum quant	HDI / LI
	1780910	DBL ADJ. WALL MOUNT BRACKET GA	Wall mount angle bracket to mount two rails. minimum projection for first rail 100mm. Distance between two rails 100 mm, 34 mm extension capability. Can be used in combination with ceiling brackets #1780906 and #1780907 Supplied with the screws to fix	HDI / LI

Part List

Spare Parts & Electrical Accessories

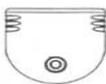	Somfy Part Number	Description	Detailed Description	Where
	1780908	TOP MOUNT KIT GA	Kit of accessories to allow the up side down installation	HDI / LI
	1780955	CUSHION FOR BELT GA	Rubber part to be positionned in the assembled track to prevent the belt to get off splitted track transported folded	HDI
	1780913	ROTATING RUNNER EYELET GA	Standard runner eyelet spare parts Unit weigh:0,7g	HDI / LI
	1780948	RIPPLE PENDANT GA	Ripple runner pendant	HDI
	1780954	PULLEY STOPPER -GA	Spare pulley stopper assembly as a kit unit weight: 5g	HDI / LI
	1780898	PULLEY COVER GA	Spare pulley cover Unit weight: 9.5g	HDI
	9015579	MOTOR BOTTOM COVER GA	Spare motor bottom	HDI
	9015443	DCT 2.5M CABLE GLYDEA	4 wire, 2. 5 m cable equipped with a RJ12 Plug to use during installation in combination with the DCT tool	HDI / LI
	9014599	DCT SETTING TOOL	3 NO dry contact switch used for setting of Glydea motors	HDI / LI
	9154205	SENSOR IR3 ILT	Infrared sensor deliverd with a RJ9 modular cable	LI
	9014068	RJ9/RJ12 ADAPTER	Plastic adapter needed to adapt the RJ9 plug of the IR3 sensor in the RJ12 socket Glydea motors	HDI/LI



Window & Blind Activity
BU Interior Window Covering